

H-16HDMI-RF-AMOD

Quick Setup Guide



Step 2: Login to NMS



- Connect the NMS port to your PC using an ethernet cable
 - Open web browser and go to http://192.168.1.30
- Login/Password: user/user

Step 3: Configure Output



Select "Output Parameters" from the main menu



Step 3: Configure Output (Continued)

Select "Manual Input" if choosing to enter your own frequencies		Select "Batch Edit" to modify levels of Attenuation/Audio/Video for all channels at once	Use drop down menu to select channel frequency if choosing Setting from list
Freq. Adjust Mode:	tting from list 🗸	Quick Channel Edit	a j
Channel NO.	tting from list	Attenuation (dB)	Frequency (IHz)
1	~	0	E2 (48.25)
2	~	0	1
3	~	0	No channel assigned
4	~	0	E3 (55.25)
5	~	0	E4 (62.25)
6	~	0	Y (76.25)
7	~	0	Z (83.25) Z1 (90.25)
8	~	0	Z2 (97.25) •
9	~	0	S1 (105.25) -
10	~	0	S2 (112.25) -
11	~	0	S3 (119.25) -
12	~	0	S4 (126.25) -
13	~	0	S5 (133.25) -
14	~	0	S6 (140.25) -
15	~	0	S7 (147.25) -
16	~	0	S8 (154.25) 🔹

H-16HDMI-RF-AMOD



https://thorbroadcast.com

sales@thorfiber.com

Quick Setup Guide