

## H-4HD-EMS

### **Quick Setup Guide**

#### Step 1: Connect and Login

Connect included power supplies





- Connect the NMS port to your PC using an ethernet cable
- Open web browser and go to http://192.168.0.136
- Login/Password: admin/admin



#### Step 3: SELECT "TS Config" FROM MAIN MENU



REPEAT THE ABOVE STEPS AS NEEDED TO CONTINUE ADDING MORE PROGRAMS

#### Step 4: IP Preferences



### Select "Output Settings" from the main menu

(	SPTS 1	224.2.2.2	3000	UDP	7	TV- 101(MPTS1)	•	18.8/20.0 M	2	Click the pencil icon to edit
	SPTS 2	224.2.2.2	3002	UDP	7	TV- 102(MPTS2)	•	18.8/20.0 M	1	
	SPTS 3	224.2.2.2	3004	UDP	7	TV- 201(MPTS3)	•	18.8/20.0 M	2	
ĺ	SPTS 4	224.2.2.2	3006	UDP	7	TV- 202(MPTS4)	•	14.7/20.0 M	/	

# From the popup window, you can enable and edit your IP preferences

Enable:	<b>~</b>		
Output Bitrate:	20.000	Mbps	
IP Address:	224.2.2.2		
Port:	3000		Click "Apply" to
Protocol:	UDP	~	save changes
Pkt Length:	7	~	
Null PKT Filter:			
Program:	TV-101(MPTS1)	~	Apply Close
		)	

## **IMPORTANT:**

Streams must be accessed through the DATA port

ACCESS THE STREAM USING THE APPROPRIATE IP ADDRESS & PORT NUMBER:

> FOR EXAMPLE: udp://@224.2.2.2:3000

## Step 6: SAVE SETTINGS

# **IMPORTANT:**

# YOU MUST SAVE CONFIGURATION OR ALL CHANGES WILL BE LOST AFTER RESTART!

System						
<ul> <li>Network</li> <li>Password</li> <li>Configuration</li> <li>Firmware</li> <li>Date LTime</li> </ul>	■ 1. Click "Conf	iguratio	'n"			
Log						
	CONFIGURATION					
2. Click the "Save" tab		Save	Restore	Factory Set	Backup	Load
3. Press "Save config" butto	When y	you chang	e settings, yo	onfig	e configuratio	n once done. n for more info:
4). Confir appear br complete.	guration,please w	will is				
H-4HD-EMS					Quick	Setup Guide



RRNADCAS

800-521-8467