

**F-4USB-TX/RX**

Quick Setup Guide

Connect the Power Supply to the Transmitter (T)



Connect the Receiver (R) to a computer using included USB Cable




“PWR” LEDs on both T and R indicate power is properly connected

“USB” LED on R indicates that the USB ports on T are ready for use



Connect Receiver to Transmitter using Single Mode Fiber (Not Included)  
Distance up to 10km

“FIBER” LEDs on both T and R will indicate fiber is properly connected

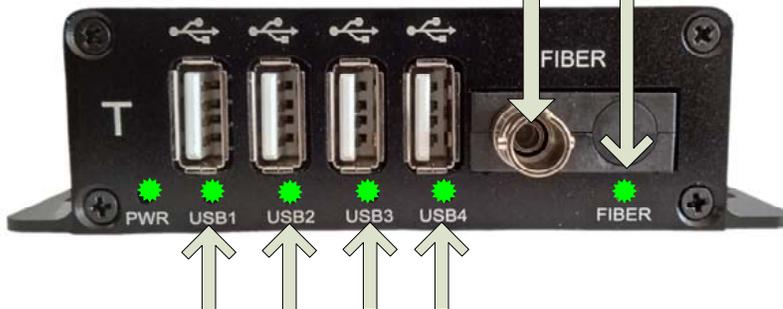

Connect USB devices to Transmitter.  
“USB” LEDs 1-4 will light when the port is in use

Scan for more info:

