

F-M2SDI-Tx/Rx / F-M4SDI-Tx/Rx Quick Setup Guide

Step 1: Connect Power

F-M2SD1



F-M4SD1



Connect the included Power Supplies to the TRANSMITTER and the RECEIVER

The RUN LED will blink indicating that power is properly connected



RUN LED

Step 2: Connect Fiber

Using Fiber Cable (not included) Connect the FIBER OUT of the TRANSMITTER to the FIBER IN of the RECEIVER




NOP LED

The NOP LED indicates the status of the fiber connection. It will turn off when the fiber is properly connected and light red when disconnected.

Step 3: SDI Connections

Transmitter


Connect SDI Video Sources

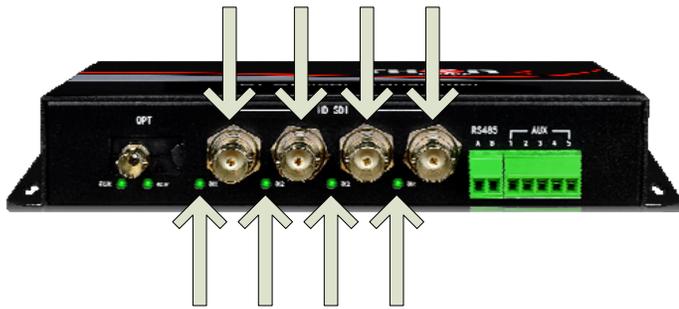

Link lights will confirm connection to source

Receiver

Connect to SDI output devices

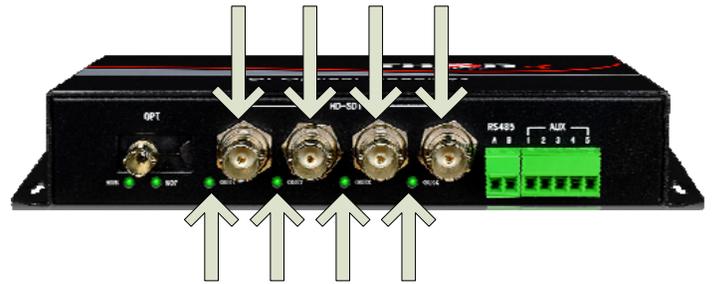

Link lights confirm connection from transmitter

IMPORTANT:

The input channel on the TRANSMITTER will correspond to the output channel on the RECEIVER.

Tx IN1 = Rx OUT1
Tx IN2 = Rx OUT2
Tx IN3 = Rx OUT3
Tx IN4 = Rx OUT4

Step 4: RS485 Connections

Example: The RS485 ports send serial data from the receiver back to the transmitter for device control.



RS485 Camera
(Not Included)

RS485 Controller
(Not Included)

F-M2SDI-Tx/Rx / **F-M4SDI-Tx/Rx**

Quick Setup Guide