


F-4A-TX/RX

Quick Setup Guide

Step 1: Connect Power

- Connect the included power supplies to the TX (Transmitter) and RX (Receiver)
- PWR LED indicators on both units will light constant GREEN

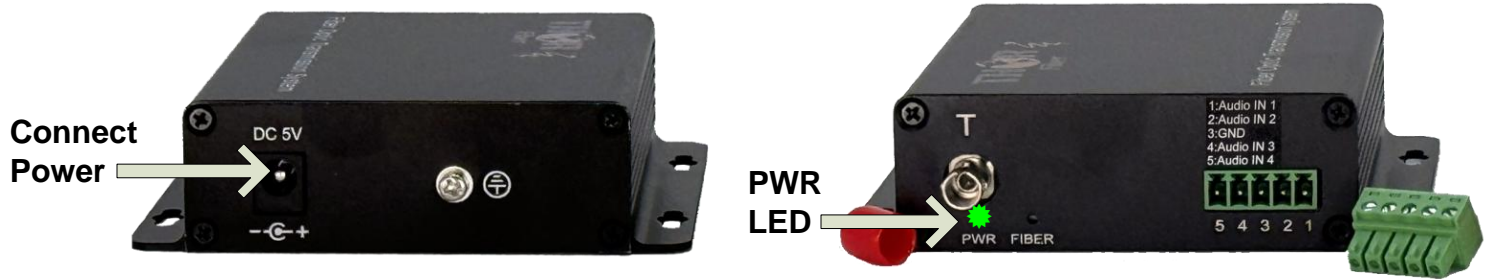


Step 2: Connect Fiber

Connect TX to RX using Single Mode Fiber (Not Included)
Distance up to 20km



Step 3: Audio Connection (Example)

IMPORTANT:
Audio Output is Analog and Unbalanced. The unit supports line-level audio only (not microphone level), with a maximum amplitude of up to 2V peak to peak.

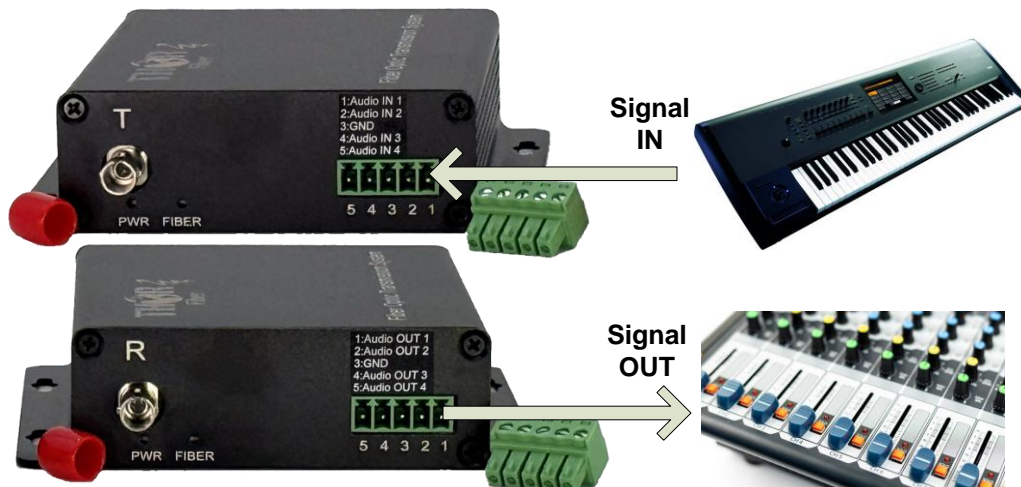

Tx Audio IN1 = Rx Audio Out1
Tx Audio IN2 = Rx Audio Out2
Tx Audio IN3 = Rx Audio Out3
Tx Audio IN4 = Rx Audio Out4

