

# F-16SDI-3G-TX/RX

# Quick Setup Guide

800-521-8467

### **Step 1: Connect Power**



Connect Included Power Cables to both Transmitter (TX) and Receiver (RX)




#### **Step 2: Connect Fiber**

**Connect Transmitter to Receiver using Single Mode Fiber with ST/PC** connector (Not Included) Distance up to 10km




### **Step 3: Connect Inputs/Outputs**

Connect SDI video inputs to the Transmitter and outputs from the Receiver and loops to the monitors Transmitter Inputs SDI 1-16 correspond to Receiver Outputs SDI 1-16

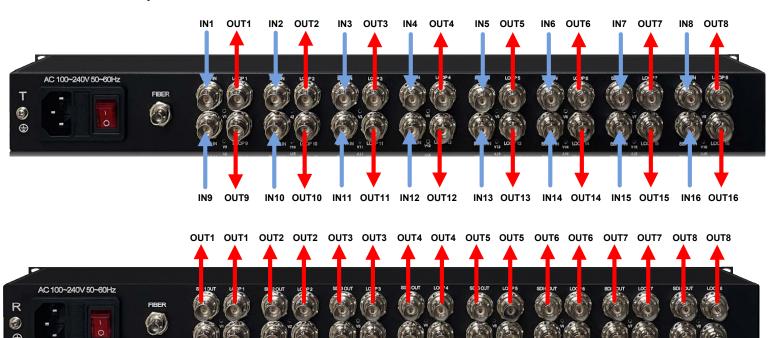

OUT9 OUT10 OUT11 OUT11 OUT12 OUT12 OUT13 OUT13 OUT14 OUT14 OUT15 OUT15 OUT16 OUT16

**Step 4: Loop Outputs (Example)** 

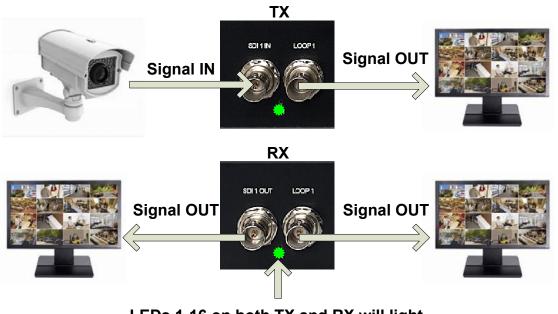

LEDs 1-16 on both TX and RX will light GREEN when INPUT is properly connected



# F-16SDI-3G-TX/RX

Quick Setup Guide

