

## H-IRD-V3S

#### Quick Setup Guide

#### Step 1: Connect Power



- Connect the NMS port to your PC using an ethernet cable •
- Open web browser and go to http://192.168.0.136 •
- Login/Password: admin/admin •

#### Step 3: Configure Tuners

Decoder			2). Click "E	dit" but
Tuner	TS Lock	Signal	Parameters	Ac on
		Quality: 0%	Frequency: 3840.000 MHz	
		Strength: 0%	LNB Frequency: 5150.000 MHz	
DVB-S2	0.000 Mbps	Power: -89.21 dBm	LNB Voltage: 0V	Edit
		BER: 1.00e+00	22K: OFF Satellite: 1	
			~	
Frequency:	3840.000	MHz	3). Enter Frequency	
NB Frequency:	5150	MHz	-,	
Symbolrate:	27500	Ksps		
LNB Voltage:	0 V	~		
	OFF	~		
22K:		(1~4)		
22K: Satellite:	1			
22K: Satellite:	1			

#### Step 4: Setting



- 1). Click "Parse Program"
- 2). Check the box for the discovered program
- 3). Click " $\rightarrow$ " button to move selected program to output
- 4). Click Program name for more program information

Program From Input:	Tuner 1 [2]		
Service Name:	THOR FI		
Short Name:	prog1		Set desired Major/Minor
Major Channel Number:	1		Channel Numbers
Minor Channel Number:	1		(Note: VCT must be
Source Id:	1		enabled for this feature,
Program Number:	4001		please see "Step 6:
Logic Channel Number:	1		Output")
Service Type:	0x01		
Service Provider:			
PMT Descriptor Tag:	0x00		
PMT Descriptor Data:		(Hex)	
PMT PID:	0x0020		
PCR PID:	0x0021		
MPEG-2 Video PID:	0x0022		
AC3 Audio PID:	0x0023		
		Apply	Click "Apply"

#### Step 5: Decoder







#### Step 6: Output







	Output				Null_PKT				
#	Enable	IP Address	Port	Protocol	Filter	Program	Output Bitrate	Status	Bit(Act/Max)
MPTS		224.2.2.2	12010	UDP 🗸				۲	0.0/80.0 M
SPTS-1	<b>~</b>	224.2.2.2	3002	UDP 🗸		THOR FI 🗸	20	٠	10.9/20.0 M
SPTS-2	<	224.2.2.2	3004	UDP 🗸		THOR FI 🗸	20	۲	9.3/20.0 M
SPTS-3		224.2.2.2	3006	UDP 🗸		THOR FI 🗸	20	•	9.3/20.0 M
eck bo	oxes to	enable SPTS	Soutputs	Selec	t desire	d program	status	light m	ust be GR





# **IMPORTANT:**

# YOU MUST SAVE CONFIGURATION OR ALL CHANGES WILL BE LOST AFTER RESTART!



### <u>H-IRD-V3S</u>



https://thorbroadcast.com

800-521-8467

**Quick Setup Guide**