

F-FE-TR-SM

Quick Setup Guide

Step 1: Connect Power

1



2






1). Connect included DC5V power supplies to both units 1 and 2

2). "PWR" LEDs on both units will light GREEN indicating the units are receiving power

Step 2: Connect Fiber

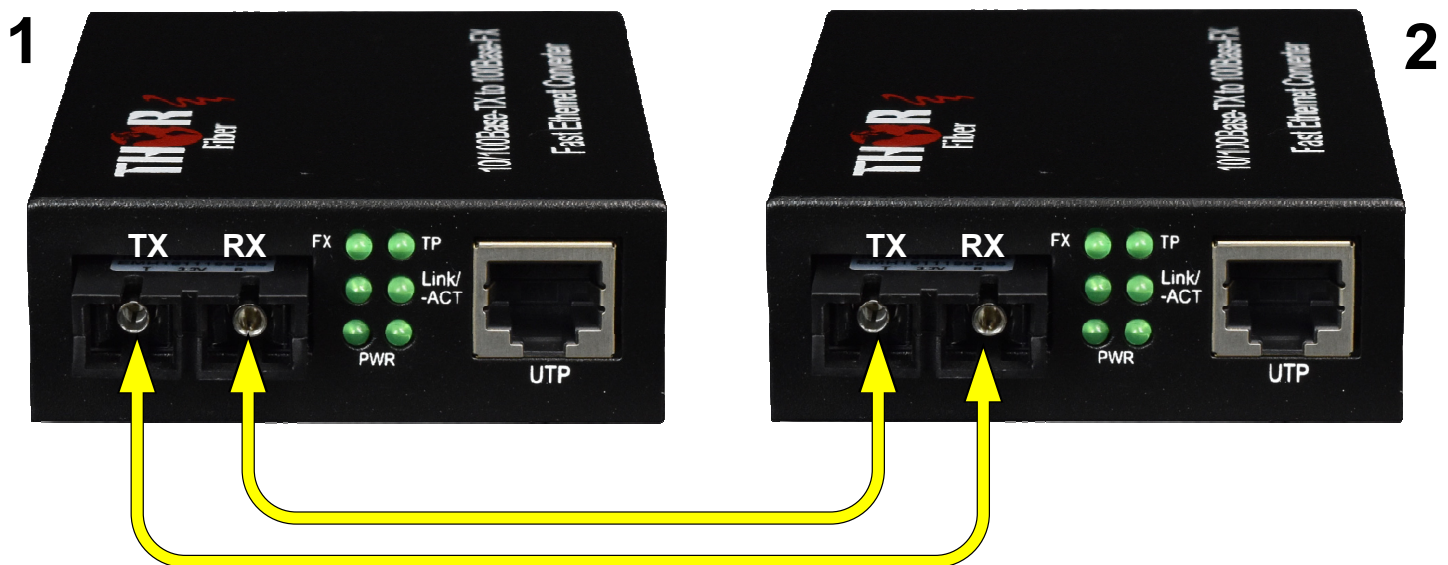


Connect unit 1 and unit 2 using two Singlemode simplex fibers with SC Connectors
(Distance up to 20km)

TX 1 → RX 2
RX 1 → TX 2

Step 3: Connect Ethernet

Connect peripheral devices using Ethernet cables to the “UTP” ports of both units 1 and 2 (Example)

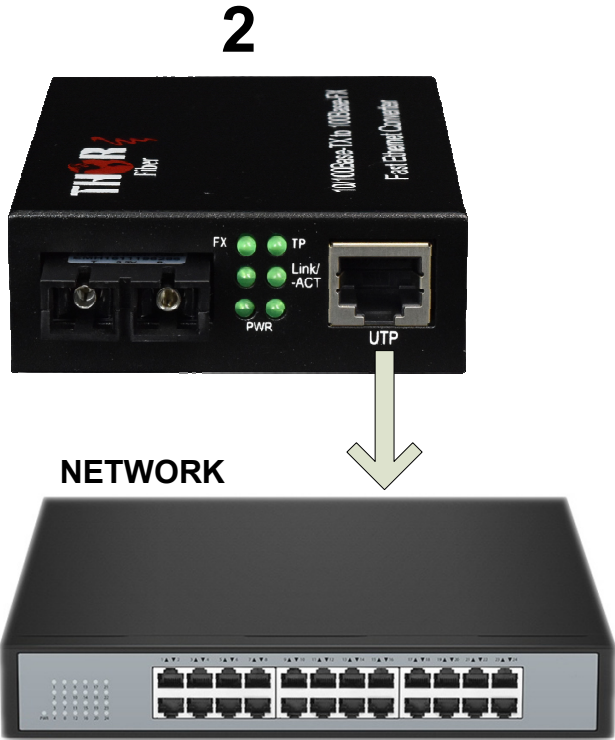

Step 4: LED Indicators

LED	FUNCTION	STATUS	DESCRIPTION
FX/ACT	Fiber Port Status	ON	Fiber link is OK
		Blink	Data being transmitted
		OFF	Fiber link fail
TP/ACT	UTP Port Status	ON	UTP Link is OK
		Blink	Data being transmitted
		OFF	UTP link fail
PWR	Power Status	ON	Power is ON
		OFF	Power fail

