


F-GET-TRS-AB

Quick Setup Guide


Step 1: Connect Power

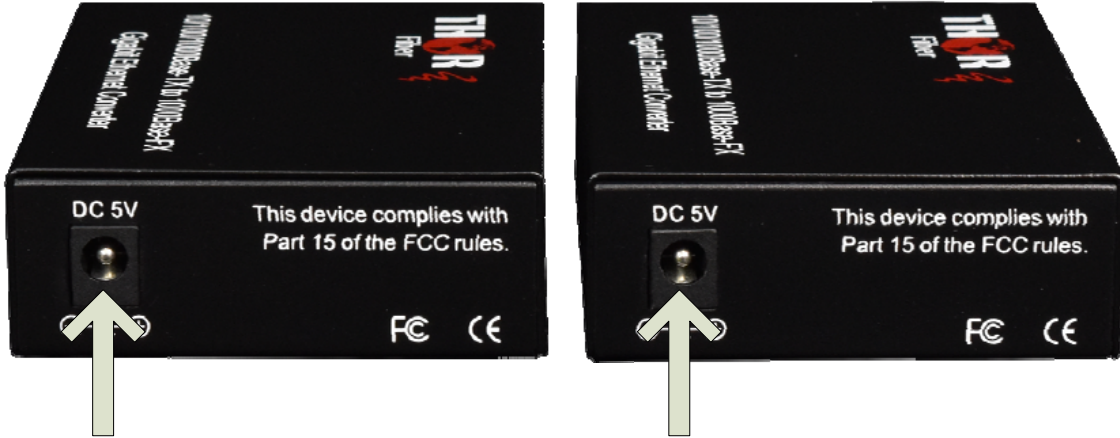

Connect included power supplies to both units A and B


Step 2: Connect Fiber

Connect unit A and unit B using Singlemode or Multimode fiber with SC/UPC Simplex Optical Connectors

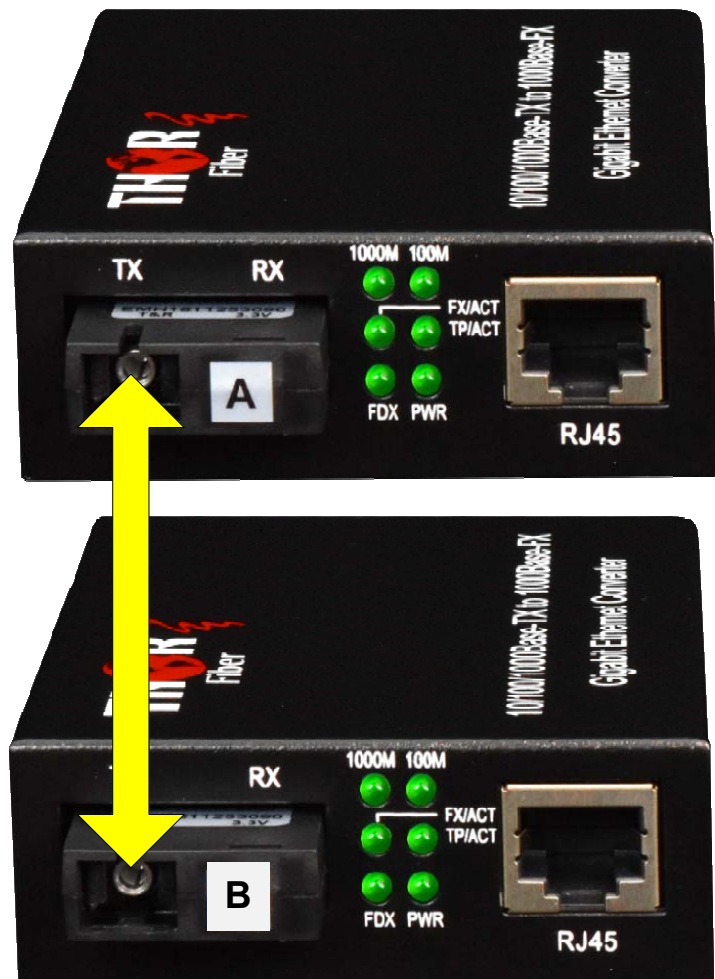

Step 3: Connect Ethernet (Example)

Connect ethernet cables to the RJ45 ports of both units A and B (Example)

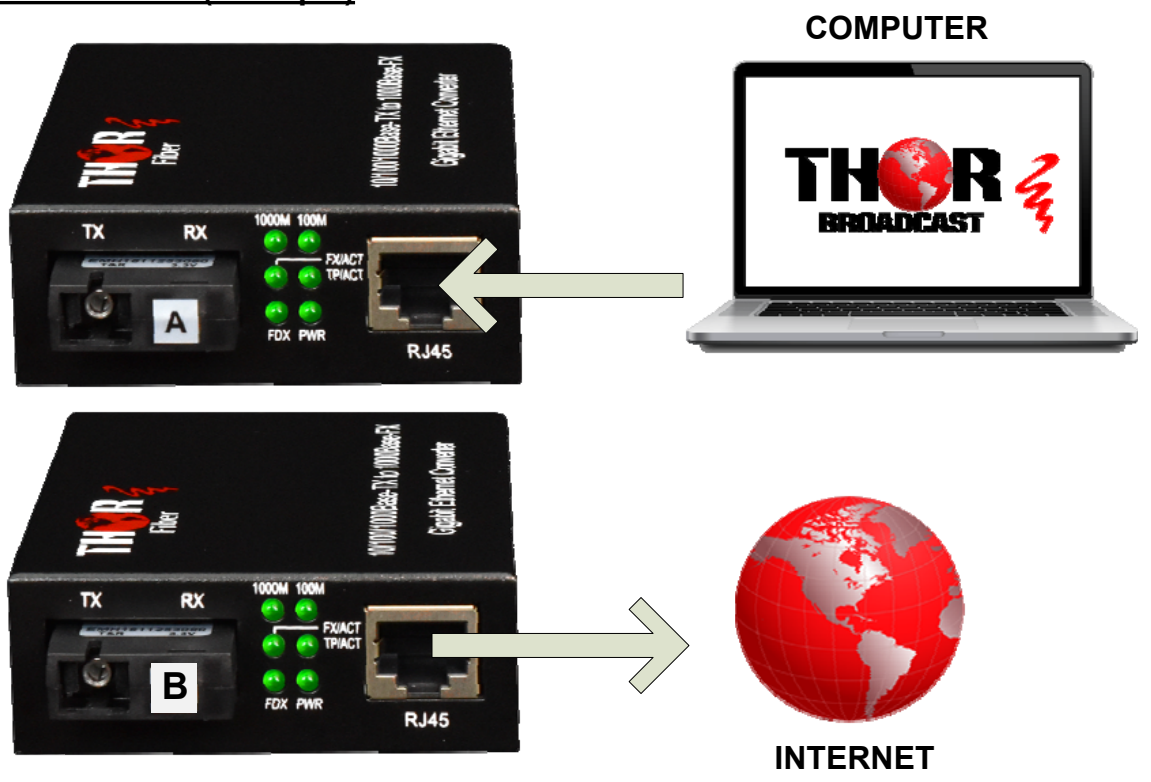

Step 4: LED Indicators

LED	FUNCTION	STATUS	DESCRIPTION
1000M	UTP Port Speed	ON	1000Mbps Speed
100M	UTP Port Speed	ON	100Mbps Speed
		OFF	No Laser Input
FX/ACT	Fiber Port Status	ON	Fiber link is OK
		Blink	Data being transmitted
		OFF	Fiber link fail
TP/ACT	UTP Port Status	ON	UTP Link is OK
		Blink	Data being transmitted
		OFF	UTP link fail
FDX	UTP Port Duplex	ON	Full Duplex
PWR	Power Status	ON	Power is ON
		OFF	Power fail