

F-4A-TX/RX

Quick Setup Guide

Step 1: Connect Power

- Connect the included power supplies to the TX (Transmitter) and RX (Receiver)
- PWR LED indicators on both units will light constant GREEN



Connect Power




"PWR" LED

Step 2: Connect Fiber

Connect Transmitter to Receiver using Single Mode Fiber (Not Included)


Distance up to 20km

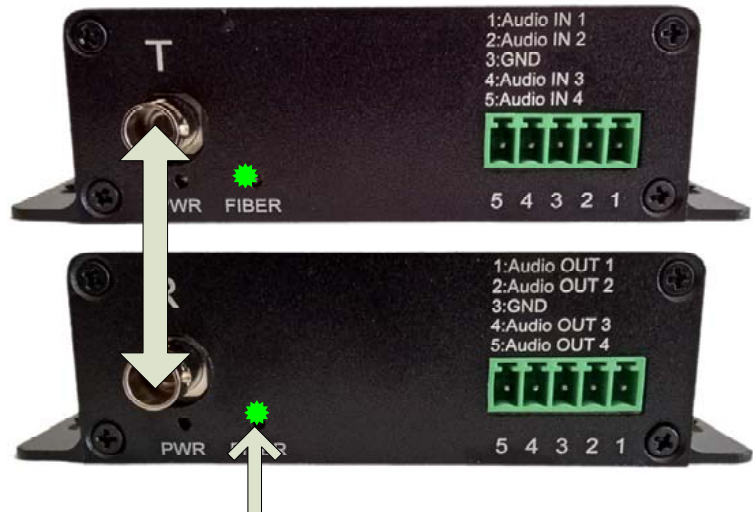

"FIBER" LEDs on both T and R indicate fiber is properly connected

Step 3: Audio Connection (Example)

IMPORTANT:
Audio Output is Analog and Unbalanced

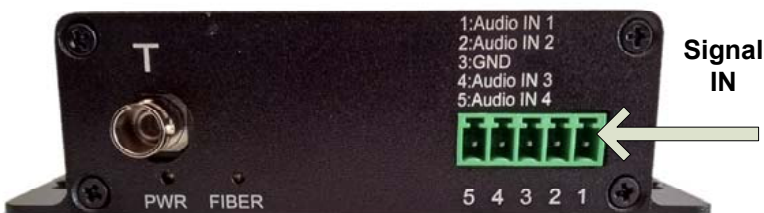

Signal IN



Signal OUT



Tx Audio IN1 = Rx Audio Out1
Tx Audio IN2 = Rx Audio Out2
Tx Audio IN3 = Rx Audio Out3
Tx Audio IN4 = Rx Audio Out4

Scan for more info:

