

# F-8A-TX/RX

## Quick Setup Guide

### Step 1: Connect Power


- Connect the included power supplies to the TX (Transmitter) and RX (Receiver)
- PWR LED indicators on both units will light constant GREEN



### Step 2: Connect Fiber

Connect Transmitter to Receiver using Single Mode Fiber (Not Included)

Distance up to 20km

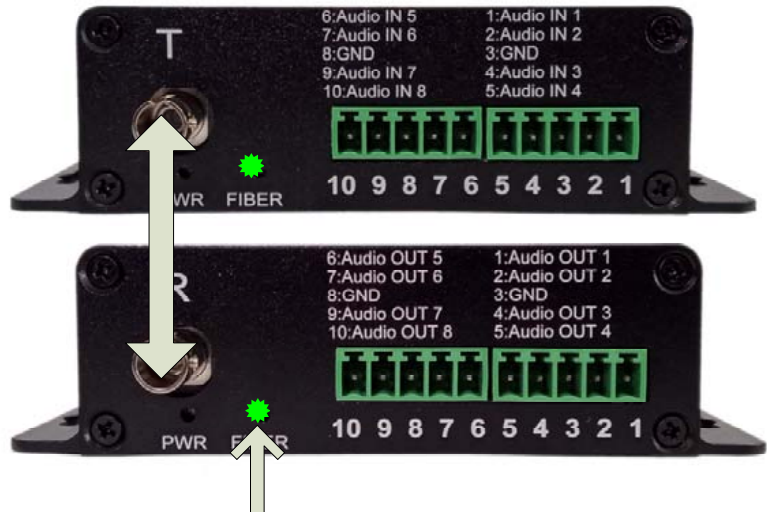

“FIBER” LEDs on both T and R indicate fiber is properly connected

### Step 3: Audio Connection (Example)

**IMPORTANT:**  
Audio Output is Analog and Unbalanced

- Tx Audio IN1 = Rx Audio Out1
- Tx Audio IN2 = Rx Audio Out2
- Tx Audio IN3 = Rx Audio Out3
- Tx Audio IN4 = Rx Audio Out4
- Tx Audio IN5 = Rx Audio Out5
- Tx Audio IN6 = Rx Audio Out6
- Tx Audio IN7 = Rx Audio Out7
- Tx Audio IN8 = Rx Audio Out8

