



H-16QAM-IP-RF Quick-configuration Guide






NMS configuration IP Address is 192.168.0.136

User Name: admin



Password: admin

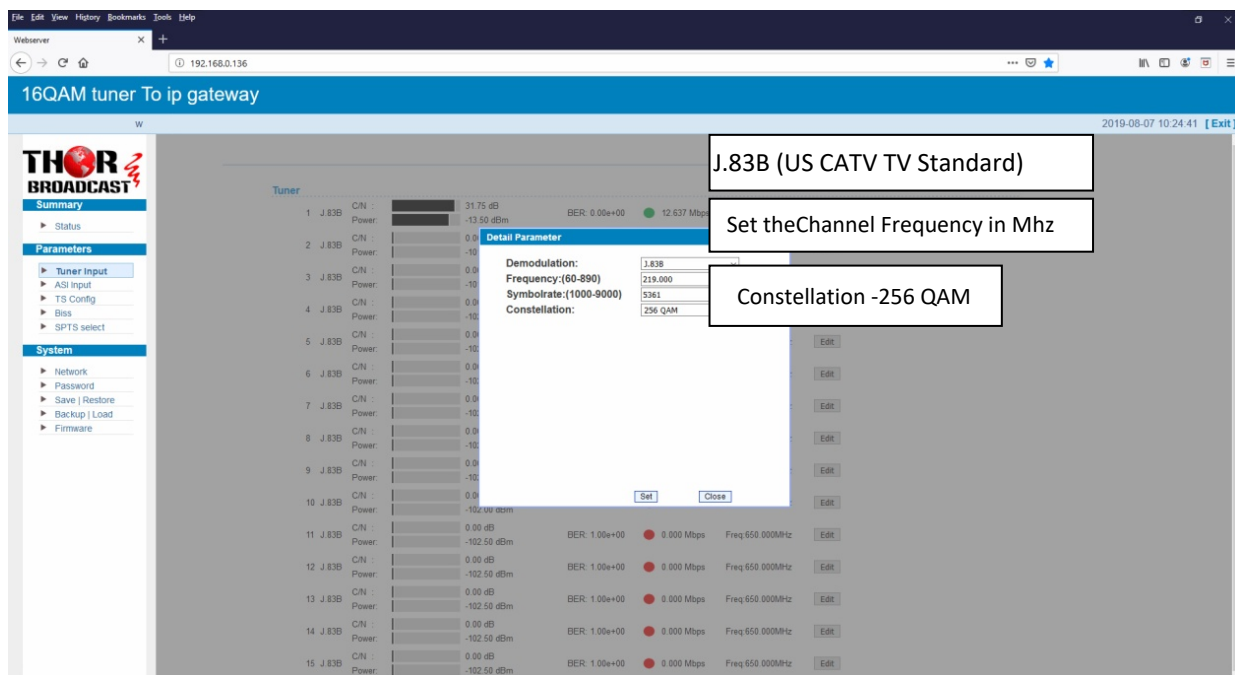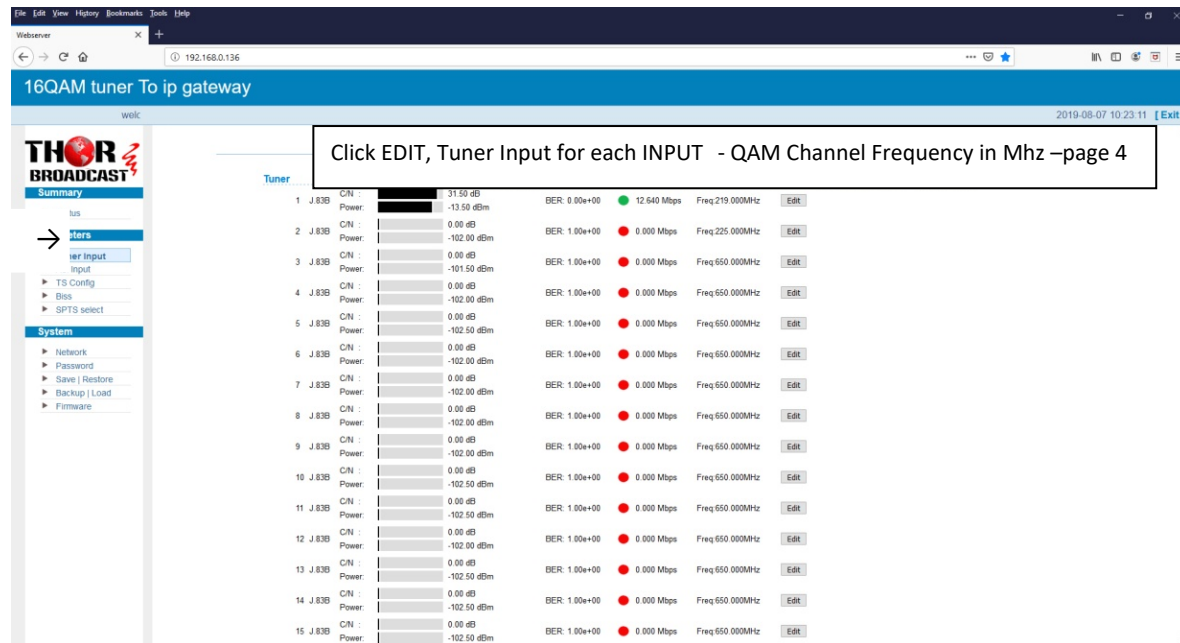

H-16QAM-IP-RF Quick-configuration Guide

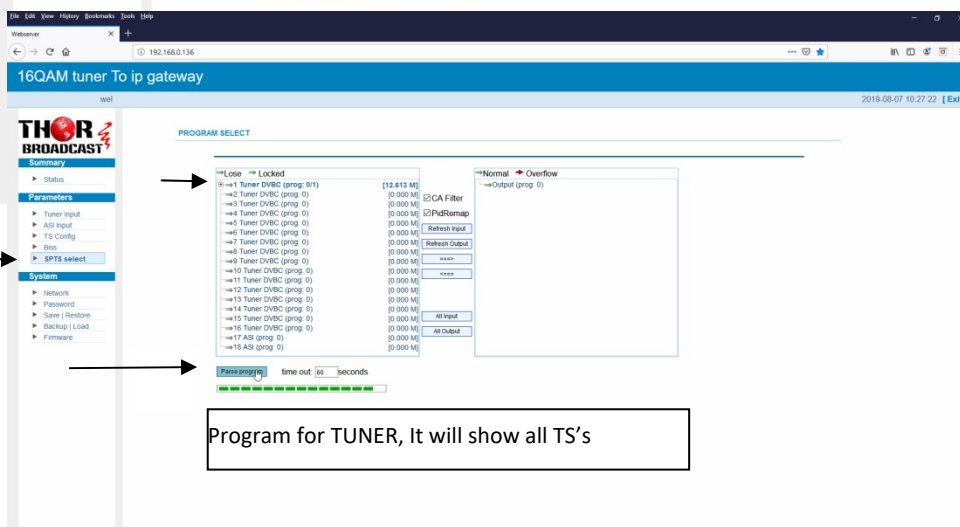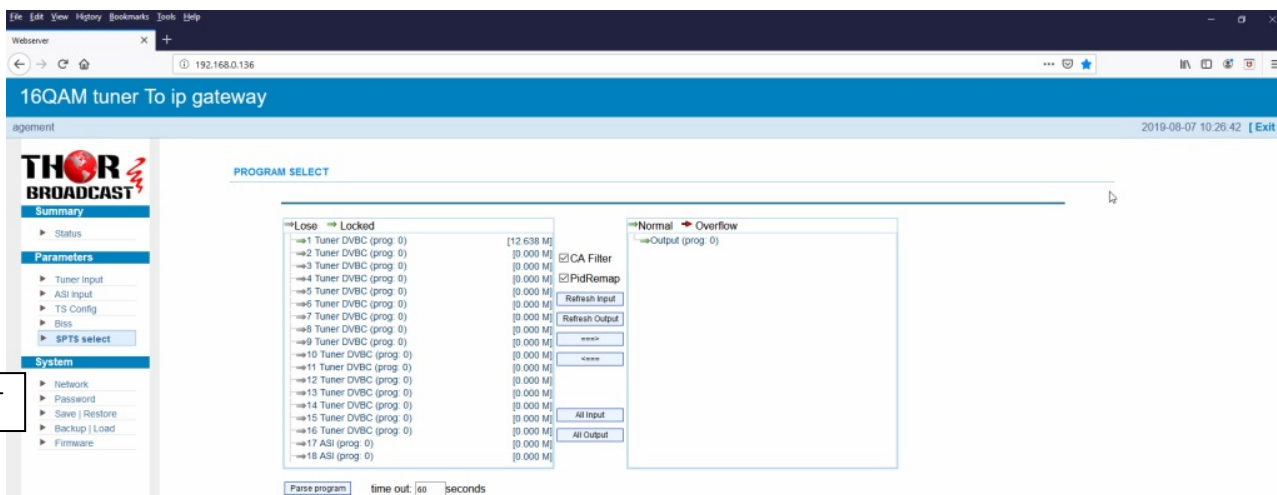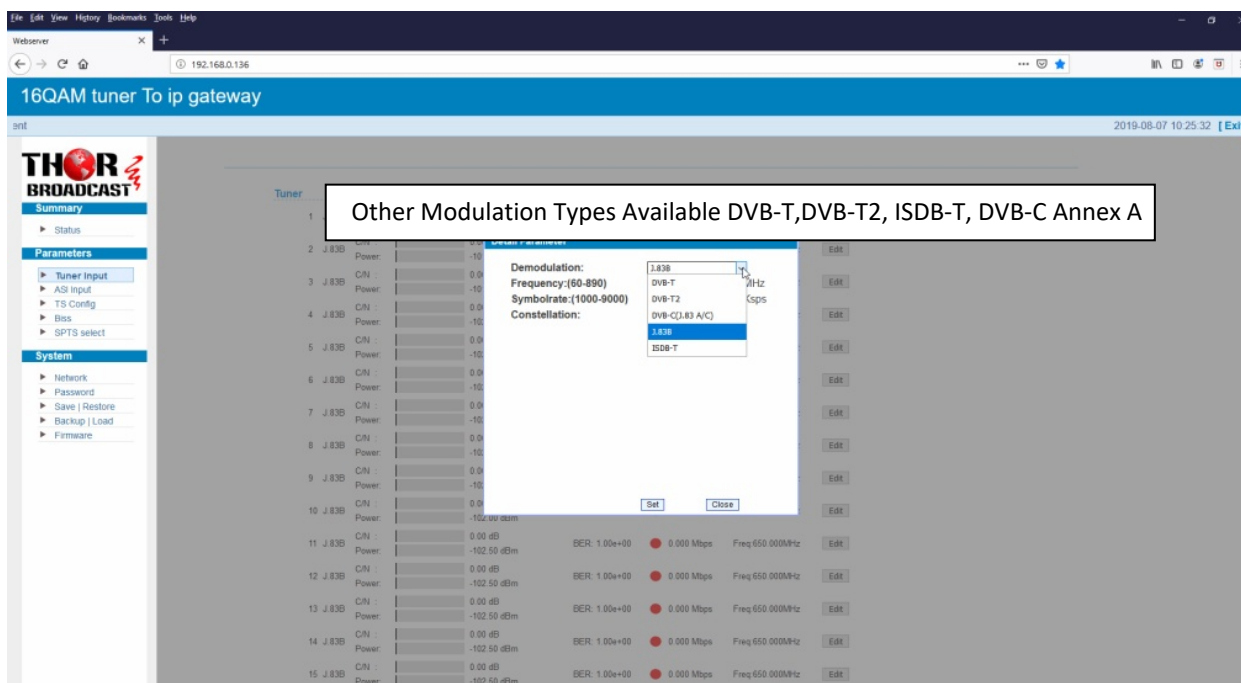

H-16QAM-IP-RF Quick-configuration Guide

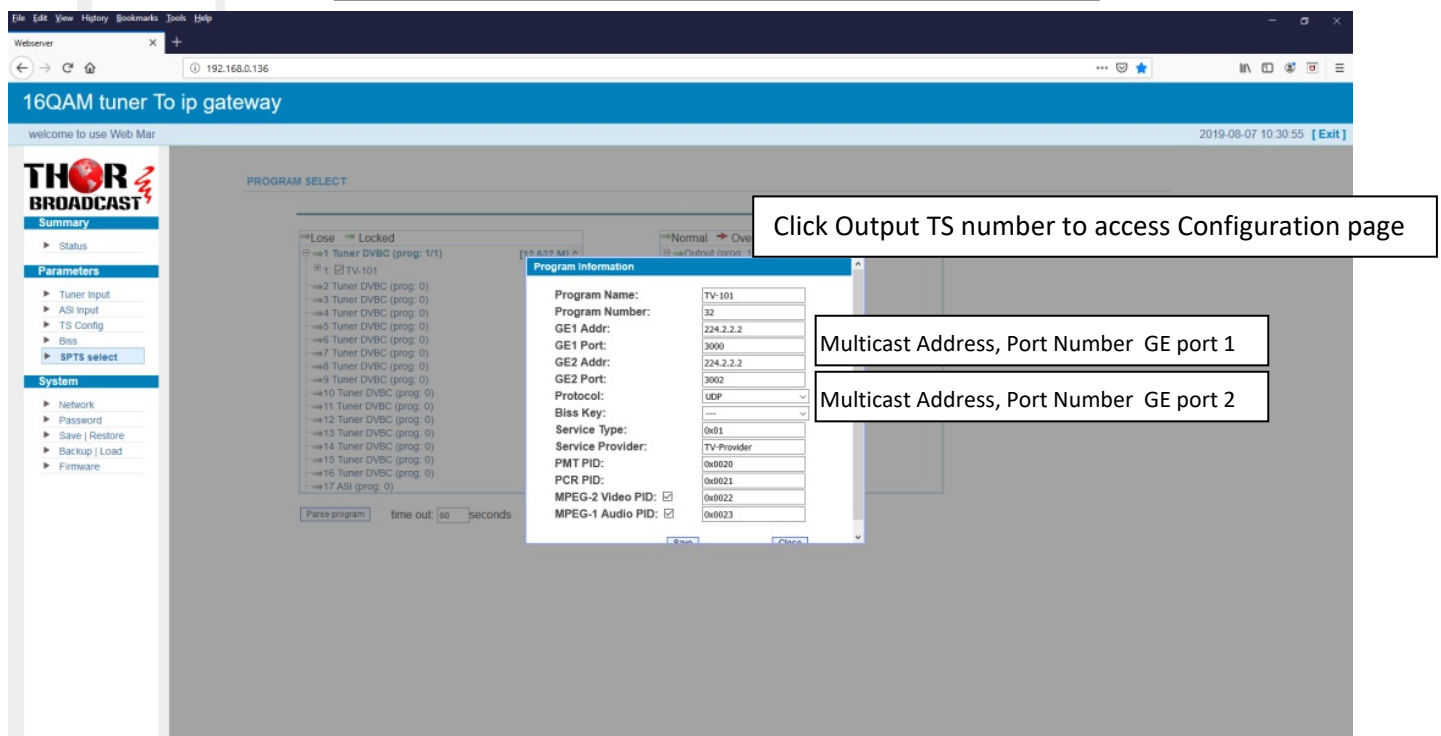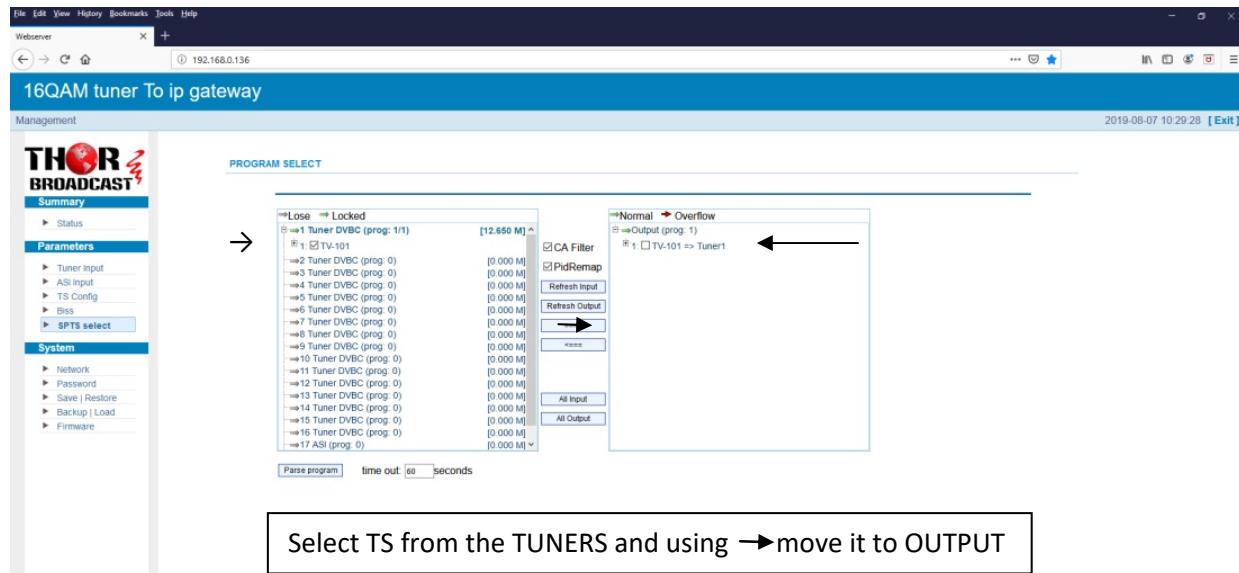

IN NETWORK TAB, The Data Port IP is 192.168.2.137

Data Port IP has to be on the different subnet than NMS IP (avoid IP Collision Conflict)

If you make any changes, please Apply and save the configuration in Save/Restore tab

Technical Support (800)-521-8467 Ext 2 <https://thorbroadcast.com/> , <http://thormodulators.com/>

If you have configuration questions, please call us and have prepared Teamviewer software for remote login

<https://www.teamviewer.com>

CATV QAM Channel Center Frequency - 54 MHz to 860 MHz (J.83B)

QAM 256 / Symbol Rate 5.361Mps , QAM 64 / Symbol Rate 5.057Mps

EIACH.	MHz Center Frequency	EIACH.	MHz Center Frequency	EIACH.	MHz Center Frequency
2	57	42	333	87	603
3	63	43	339	88	609
4	69	44	345	89	615
5	79	45	351	90	621
6	85	46	357	91	627
95	93	47	363	92	633
96	99	48	369	93	639
97	105	49	375	94	645
98	111	50	381	100	651
99	117	51	387	101	657
14	123	52	393	102	663
15	129	53	399	103	669
16	135	54	405	104	675
17	141	55	411	105	681
18	147	56	417	106	687
19	153	57	423	107	693
20	159	58	429	108	699
21	165	59	435	109	705
22	171	60	441	110	711
7	177	61	447	111	717
8	183	62	453	112	723
9	189	63	459	113	729
10	195	64	465	114	735
11	201	65	471	115	741
12	207	66	477	116	747
13	213	67	483	117	753
23	219	68	489	118	759
24	225	69	495	119	765
25	231	70	501	120	771
26	237	71	507	121	777
27	243	72	513	122	783
28	249	73	519	123	789
29	255	74	525	124	795
30	261	75	531	125	801
31	267	76	537	126	807
32	273	77	543	127	813
33	279	78	549	128	819
34	285	79	555	129	825
35	291	80	561	130	831
36	297	81	567	131	837
37	303	82	573	132	843
38	309	83	579	133	849
39	315	84	585	134	855

