

F-4A-B-XLR-TX/RX

Quick Setup Guide

Step 1: Connect Power




Connect the Included Power Supplies to the Transmitter (Tx) and the Receiver (Rx)



“PWR” LEDs on both Tx and Rx indicate power is connected properly

Step 2: Connect Fiber

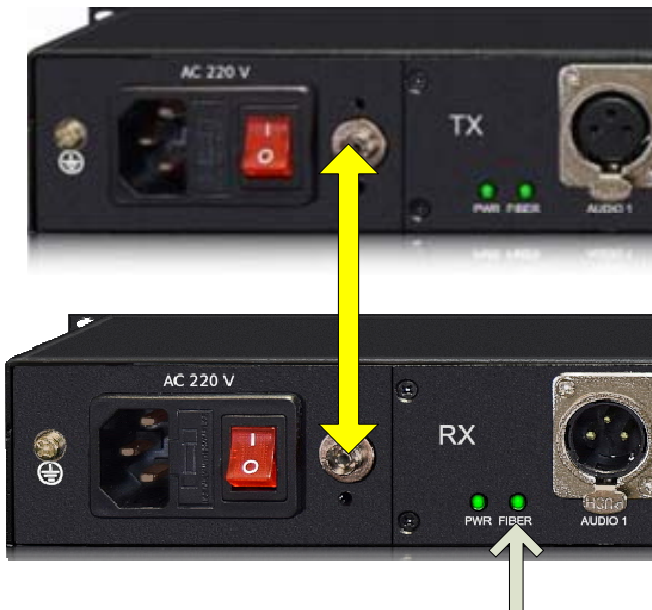

“FIBER” LEDs on both Tx and Rx indicate fiber is connected properly


Connect Transmitter to Receiver using Single Mode Fiber (Not Included) ST/PC fiber connector

Distance up to 20-120Km
(model dependent)


Step 3: Connect Audio (EXAMPLE)



T Audio 1 (Female) = R Audio 1 (Male)
T Audio 2 (Female) = R Audio 2 (Male)
T Audio 3 (Female) = R Audio 3 (Male)
T Audio 4 (Female) = R Audio 4 (Male)

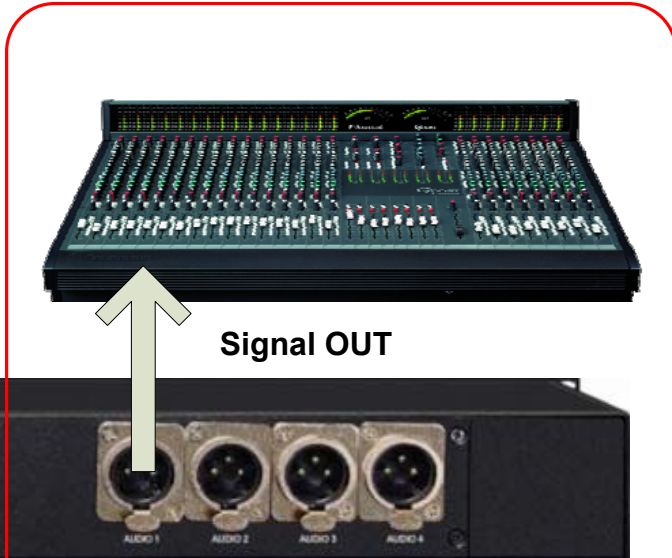

R Audio 1 (Female) = T Audio 1 (Male)
R Audio 2 (Female) = T Audio 2 (Male)
R Audio 3 (Female) = T Audio 3 (Male)
R Audio 4 (Female) = T Audio 4 (Male)

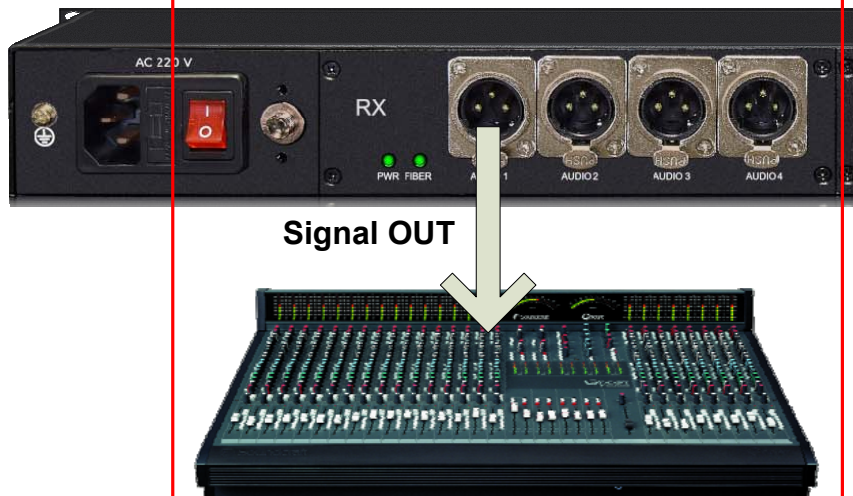

Signal OUT



Signal IN

IMPORTANT:

Line level audio only.

Scan for more info:



PLEASE NOTE: Product appearance and labeling may vary slightly

F-4A-B-XLR-TXRX

Quick Setup Guide



<https://thorbroadcast.com>

800-521-8467

sales@thorfiber.com