 


H-THUNDER-2


Quick Setup Guide

Step 1: Connect and Login

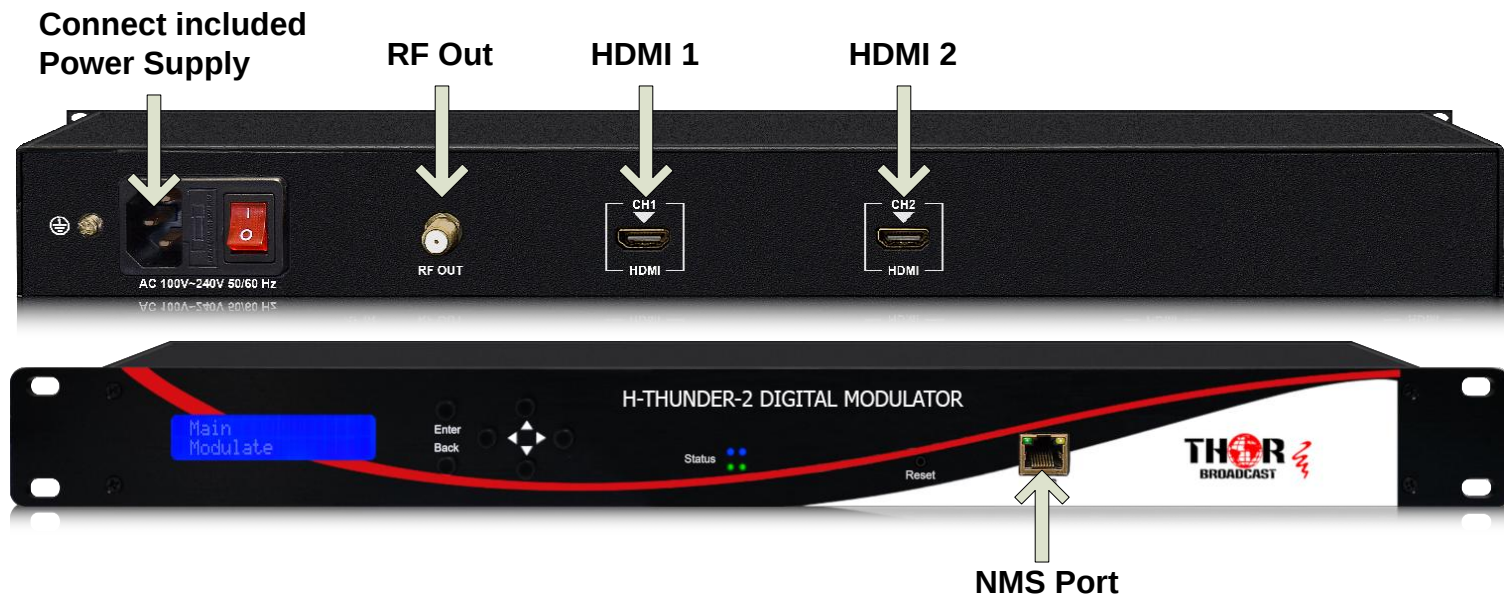



- Connect the NMS port to your PC using an Ethernet cable
- Open web browser and go to <http://192.168.0.188>
- Login/Password: admin/admin

Step 2: Modulator Settings

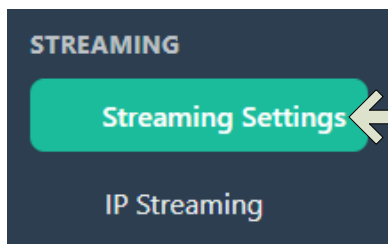

1). Click "Streaming Settings" from main menu


2). Select Broadcast Standard (ATSC for AIR or J83B for CABLE)

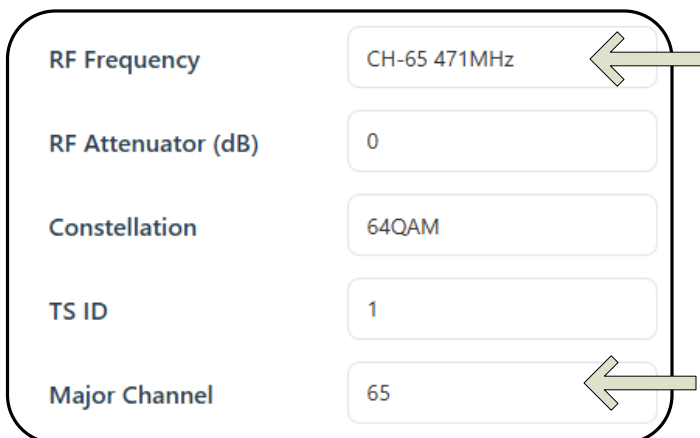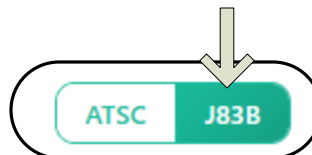

3). Choose RF Frequency

4). Choose Major Channel


5). Click "Apply"

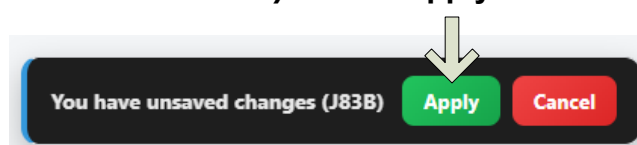

NOTE:

Channels 1 & 2 will both display on the selected Major Channel
Example: 65-1 and 65-2

Step 3: IP Streaming

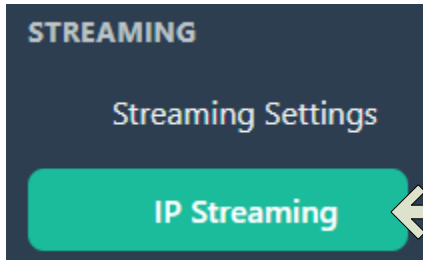

1). Click "IP Streaming" from main menu

IMPORTANT:

STREAMS ARE
ACCESSED VIA THE
NMS PORT


Channel	Protocol	Mode	IP address	Port
Ch1	UDP	multicast	225.2.2.2	2234
Ch2	UDP	multicast	225.2.2.2	2236
MPTS	UDP	multicast	225.2.2.2	2242

2). Select Protocol
(UDP or RTP)

3). Select Mode
(Multicast or Unicast)

4). IP Address and Port Numbers
may be changed to preference

5). Click "Apply"

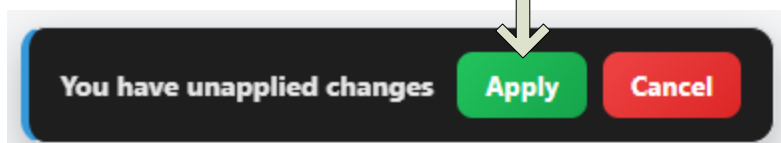

ACCESS THE STREAM USING THE APPROPRIATE
SYNTAX, IP ADDRESS & PORT NUMBER IN THE URL:

EXAMPLES:
udp://@225.2.2.2:2234
rtp://@225.2.2.2:2234

Scan for more:



H-THUNDER-2

Quick Setup Guide