

THOR

BROADCAST

User Manual

Encoder



H-HDMI-E

Decoder



H-HDMI-D

1080p IP Streaming Encoder/Decoder

Table of Contents

1. Product Introduction.....	1
1.1 Features	1
1.2 Package List	1
2. Specification	2
3. Panel Description.....	3
3.1 H-HDMI-E Encoder.....	3
3.2 H-HDMI-D Decoder	4
4. System Connection.....	5
4.1 Connection Type.....	5
4.2 System Diagram	5
4.3 Hardware Setup.....	7
5. Operation of IP Streaming Management.....	8
5.1 General Information	8
5.2 General Setting.....	10
5.3 Video Routing Tab	14
5.3.1 Video Switching	14
5.3.2 Video Recording	15
5.3.3 Sending Single Source to All RX Devices	16
5.3.4 Disconnecting Source from RX.....	16
5.3.5 Preset Management	17
5.4 Video Preview Tab	17
5.5 Video Wall Tab.....	20
5.5.1 Configuring a Video Wall	20
5.5.2 Editing a Video Wall.....	22
5.5.3 Deleting a Video Wall	23
5.6 Audio Routing Tab	23
5.7 RS232 Routing Tab	25
5.7.1 Assign Encoder to all Decoders	26
5.7.2 Sending RS232 Data from IP Streaming Management to a Third-party Device	26

5.8 IR Routing Tab.....	26
5.8.1 Assign Encoder to all Decoders.....	27
5.8.2 Sending IR Data from IP Streaming Management to a Third-party Device	27
5.9 Global Command Options and Settings	29
5.9.1 Decoder (RX) Settings Options	29
5.9.1.1. Video Format Setting.....	30
5.9.1.2. Device Setting	31
5.9.1.3. Factory Reset.....	33
5.9.1.4. Device Reboot.....	33
5.9.1.5. Upgrade.....	33
5.9.1.6. Video File Management.....	34
5.9.2 Encoder (TX) Settings Options	34
5.9.2.1. Device Setting	35
5.9.2.2. Video Format Setting.....	36
5.9.2.3. Factory Reset.....	38
5.9.2.4. Device Reboot.....	38
5.9.2.5. Upgrade.....	38
5.10 System Management Tab.....	39
5.10.1 Security Settings.....	39
5.10.2 System Logs.....	40
5.10.3 Group Management.....	41
5.11 Routing Table	42

1. Product Introduction

The H-HDMI-E/D is an IP Streaming Encoder/Decoder which use H.264 standard to extend HDMI video, IR and RS232 control signals over IP network. It works with one control PC (Wake on LAN) and one switch whose transmission rate is 100Mbps or higher to control a variety of functions.

The H-HDMI-E/D features 1080p HDMI video switching, video wall, video live preview, audiode-embedding, audio switching, IR&RS232 transmission, video recording, PoE, etc.

The control software "IP Streaming Management" merge all functions for user control the IP streaming system.

1.1 Features

- Supports H.264 encoding and decoding.
- 1080p video over IP network with IR and RS232 control signals at distances up to 120m over CATx cable.
- Supports video extension, video distribution and video matrix.
- Supports output video scaling to 720p or 1080p.
- Supports PoE , Encoder/Decoder can be powered by PoE Switch.
- Supports Video Wall, Video Live Preview on the GUI.
- 25 video wall modes (1x2, 1x3, 1x4, 1x5.....5x5) selectable.
- Supports Video Broadcasting over network.
- Supports video recording.
- The encoder features HDMI loop out.
- Supports audio breakout.
- Supports RTSP, RTP, HTTPFLV, UDP, TCP Protocol.
- Supports Unicast and Multicast.

1.2 Package List

H-HDMI-E

- 1x Encoder (TX)
- 2x Mounting Ears with 2 Screws
- 1x 3-pin Terminal Block
- 1x User Manual

H-HDMI-D


- 1x Decoder (RX)
- 2x Mounting Ears with 2 Screws
- 1x 3-pin Terminal Block
- 1x User Manual

2. Specification

H-HDMI-E	
Video Input	(1) HDMI In
Video Input Connector	(1) Type-A female HDMI
HDMI Input Resolution	Up to 1080p@60Hz 444 10/12bit
Video Output	(1) HDMI Out
Video Output Connector	(1) Type-A female HDMI
HDMI Output Resolution	Up to 1080p@60Hz 444 10/12bit
Control	(1) RS232, (1) IR In, (1) IR Out, (1) LAN (PoE)
Control Connector	(1) 3-pin terminal block, (2) 3.5mm jack, (1) RJ45
H-HDMI-D	
Video Output	(1) HDMI Out
Video Output Connector	(1) Type-A female HDMI
HDMI Output Resolution	Up to 1080p@60Hz 444 10/12bit
Audio Output	(1) Audio Out (L+R)
Audio Output Connector	(1) RCA jack
Control	(1) Storage, (1) RS232, (1) IR In, (1) IR Out, (1) LAN (PoE)
Control Connector	(1) Type-A USB, (1) 3-pin terminal block, (2) 3.5mm jack, (1) RJ45
General	
Video Encoding Standard	H.264
CATx Cable Length	Up to 120 meters
External Power Supply	Input: AC 100~240V, 50/60Hz, Output: 12V DC 1A; PoE supported.
Power Consumption	Encoder:4W (Max); Decoder:3.5W (Max)
Operation Temperature	-5°C ~ +55°C
Storage Temperature	-25°C ~ +70°C
Relative Humidity	10%-90%
Dimension (W*H*D)	152.0mm x 21.0mm x 100.0mm
Net Weight	Encoder: 340; Decoder: 345g


3. Panel Description

3.1 H-HDMI-E Encoder

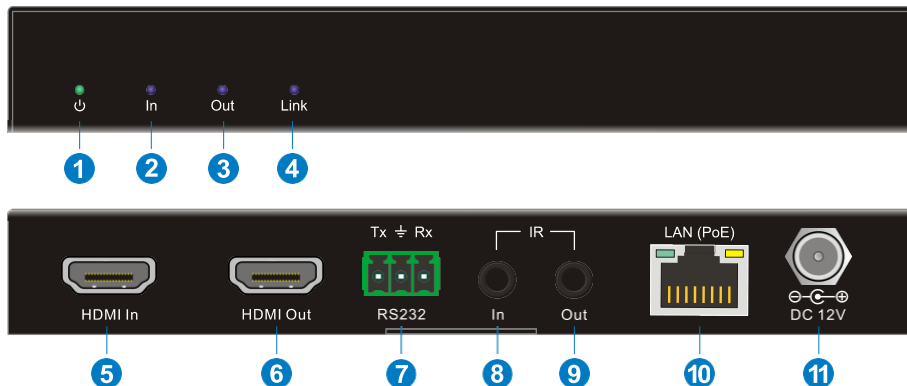

- ① **POWER LED:** The LED illuminates green when power is applied.
- ② **In LED:** The LED illuminates blue when the encoder detects HDMI source input.
- ③ **Out LED:** The LED illuminates blue when the HDMI Out port is connected to display device.
- ④ **Link LED:** The LED illuminates blue when there is a valid LAN link between the encoder and the network switch.
- ⑤ **HDMI In:** Type-A female HDMI port to connect HDMI video source device.
- ⑥ **HDMI Out:** Type-A female HDMI port to connect HDMI display device.
- ⑦ **RS232:** 3-pin terminal block for RS232 routing control. Supports point to point unicast and point to multipoint broadcast configuration.
- ⑧ **IR IN:** 3.5mm jack to connect an IR receiver for IR routing control.
- ⑨ **IR OUT:** 3.5mm jack to connect an IR emitter for IR routing control.
- ⑩ **LAN (PoE):** RJ45 port to connect directly to the decoder or a network switch using a CATx cable.
- ⑪ **DC 12V:** DC port for AC power adapter connection.

3.2 H-HDMI-D Decoder

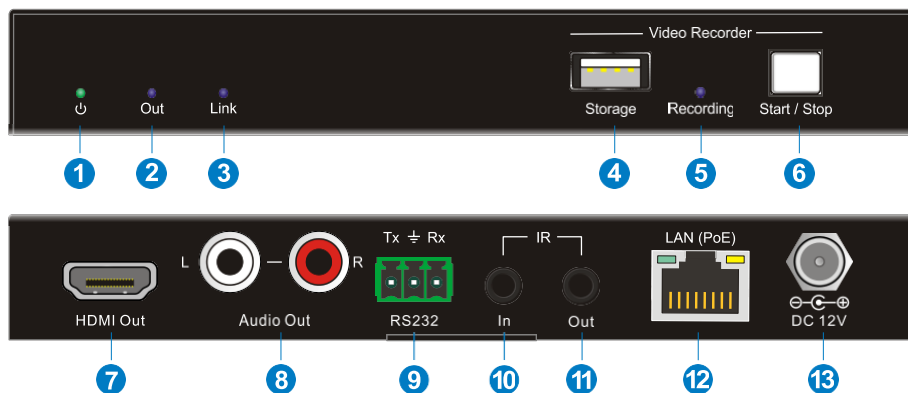

- ① **POWER LED:** The LED illuminates green when power is applied.
- ② **Out LED:** The LED illuminates blue when the HDMI Out port is connected to display device.
- ③ **Link LED:** The LED illuminates blue when there is a valid LAN link between the decoder and the network switch.
- ④ **Storage:** Type-A USB to connect U-disk for video recording.
- ⑤ **Recording LED:** The LED illuminates blue when recording video.
- ⑥ **Start/Stop Button:** Press the button to start or stop video recording.
- ⑦ **HDMI Out:** Type-A female HDMI port to connect HDMI display device.
- ⑧ **Audio Out:** RCA jack to connect audio output device.
- ⑨ **RS232:** 3-pin terminal block for RS232 routing control. Supports point to point unicast and point to multipoint broadcast configuration.
- ⑩ **IR IN:** 3.5mm jack to connect an IR receiver for IR routing control.
- ⑪ **IR OUT:** 3.5mm jack to connect an IR emitter for IR routing control.
- ⑫ **LAN (PoE):** RJ45 port to connect directly to the encoder or a network switch using a CATx cable.
- ⑬ **DC 12V:** DC port for AC power adapter connection.

4. System Connection

4.1 Connection Type

There are three types of possible applications:

Extender (Point-to-Point)

In a point-to-point configuration, there is no need for a switch. Distribute full, uncompressed data up to 1080p@60Hz resolution and RS232, IR control signals over a single Cat-x cable.

Splitter (One-to-Many)


With only one encoder and one Ethernet switch (100Mbps or higher), any A/V signal can be flawlessly and instantly distributed to a near limitless number of decoder and screens, any number of times.

Matrix Switcher (Many-to-One, Many-to-Many)

The combination of switching and splitting enables a completely scalable matrix system. Independently route video, audio and RS232, IR control signal from any source to any endpoint. The IP streaming system allows for on-the-fly upgrading and a virtually unlimited number of I/O ports.

4.2 System Diagram



The following diagram illustrates typical input and output connections that can be utilized with the IP streaming encoder/decoder:

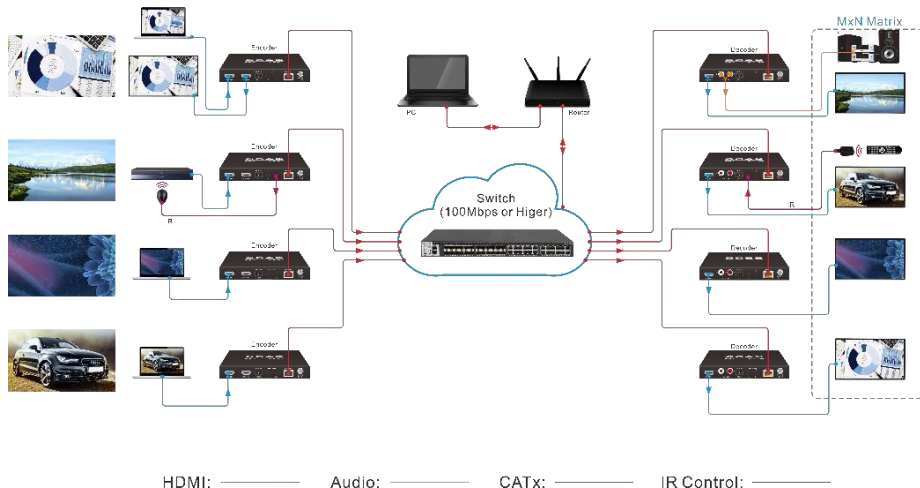

IP Streaming System

Control PC connection:

To ensure the stability of the system, a router should be connected to the system, and the control PC needs to be connected to the router or switch with a network cable instead of a wireless connection.

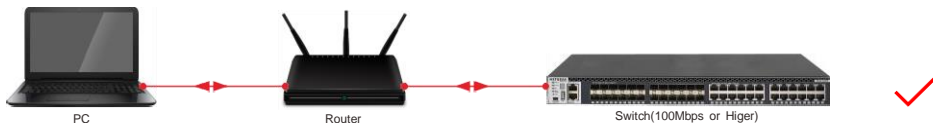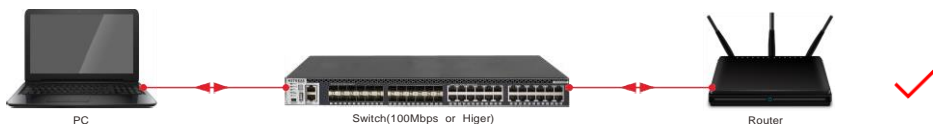① PC → Router → Switch**② PC → Switch → Router****③ PC → (Wireless) Router → Switch****④ PC → Switch**

4.3 Hardware Setup

Please follow the steps below to complete the system installation:

- 1) Connect the video/graphics source device to the HDMI input connector on each TX unit.
- 2) (Optional) Connect the video display device to the HDMI output connector on each TX unit.
- 3) Connect the video display device to the HDMI output connector on each RX unit.
- 4) (Optional) Connect audio output device (e.g. speaker or headphone) to the audio output connector of the RX if you want to test additional audio extension.
- 5) (Optional) Connect RS232 devices as needed if you want to test RS232 serial extension between TX and RX units.
- 6) (Optional) Connect compatible IR emitter modules to the IR output connectors of any TX or RX.
- 7) (Optional) Connect compatible IR receiver modules to the IR input connectors of any TX or RX.
- 8) Connect an Ethernet cable (Cat-6a recommended) from the LAN port each TX and RX unit to any available LAN port.
- 9) Connect the control PC to the LAN port of router device or to a Cat-x port of the switch (except the management/console port of the switch).
- 10) The hardware setup is now complete.

Note: The default IP mode is DHCP, a network switch which has the function of IP distributing is needed for setting up the system. Any TX can also be connected directly to a RX without the switch using CaTx cable to feature point to point extension.

5. Operation of IP Streaming Management


5.1 General Information

The IP Streaming Management is a control software used to configure and control signal extension, routing and switching between Encoder and Decoder units.

The IP Streaming Management can be used on any Windows PC using Microsoft .Net framework 4.0 or later Windows version.

Before proceeding ensure that the IP addresses of PC and all units are on the same local area network (LAN).


After install the control software, start the application by double clicking on H-HDMI-E/D.exe file.

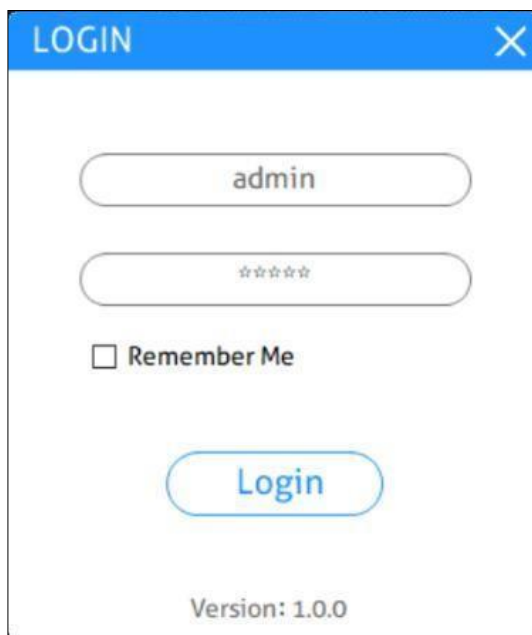

Username: admin

Password: admin

Upon launch, the IP Streaming Management main window will open up in the “Video Switching” tab as shown in the picture below:

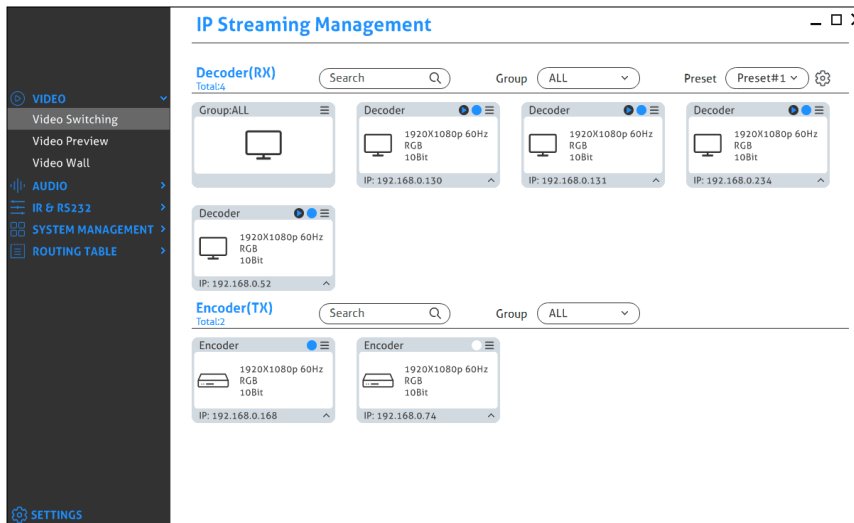

After starting the IP Streaming Management application, it will show discovered devices as tiles. There are few things to take note of:


- The application has many different tabs for controlling the HDMI routing, as well as routing of other signals such as analog audio, RS232 control, etc. The default current tab should be "Video Switching", which means the video source displayed by an RX device (Decoder).
- The top area of the user interface is labeled "Decoder (RX)". All RX devices detected on the network will be displayed here.
- The bottom area of the user interface is labeled "Encoder (TX)". All TX devices detected on the network will be displayed here.

All connected TX and RX devices on the network will appear as a gray tile within the application window.


Each tile will identify the “Hostname” of the device. The “Hostname” can be updated at any time by “Network Setting” interface. The “IP Address” of the device is also shown in the tile.

If a source device is connected to the video port of the TX, a picture illustrating a

source device will appear within the respective tile along with information about the video feed. Similarly, if a display device is connected to the RX, an illustration of a display will appear within the corresponding RX tile. If no device is visible within the tile, it means that the device is connected and detected but no source (or display) device is connected to the TX (RX).

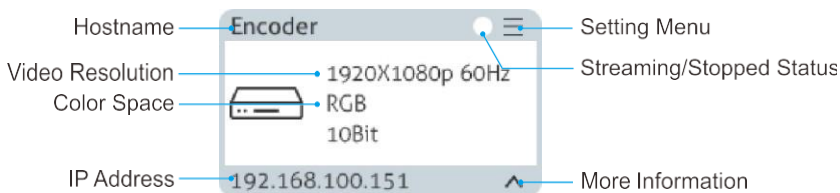


TX device tile info

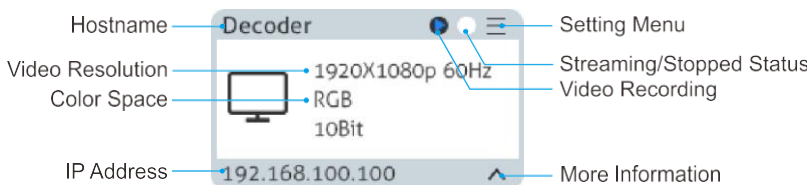

RX device tile info

5.2 General Setting

Click  on at the bottom-left corner to enter system setting interface.

Setting

Base

Log

Audio

User: **admin** Logout

Initial Page: Video Switch ▾

Factory Reset All: Factory Reset

Update Time All: Update Time

Enable Preview: ☐


Preview Interval Seconds: 5

Save

Version: 1.0.0


Basic Setting:

- **LogOut:** Click the button to exit the current login account.
- **Initial Page:** Select initial interface for system operating easily.
- **Factory Reset All:** Click “Factory Reset” to restore all Encoders and Decoders to factory settings.
- **Update Time All:** Click “Update Time” to set the time of all connected Encoders and Decoders to synchronize with computer time.
- **Enable Preview:** Enable video preview function, the Encoder/Decoder title on the “Video Switching” will display the video image as shown below:

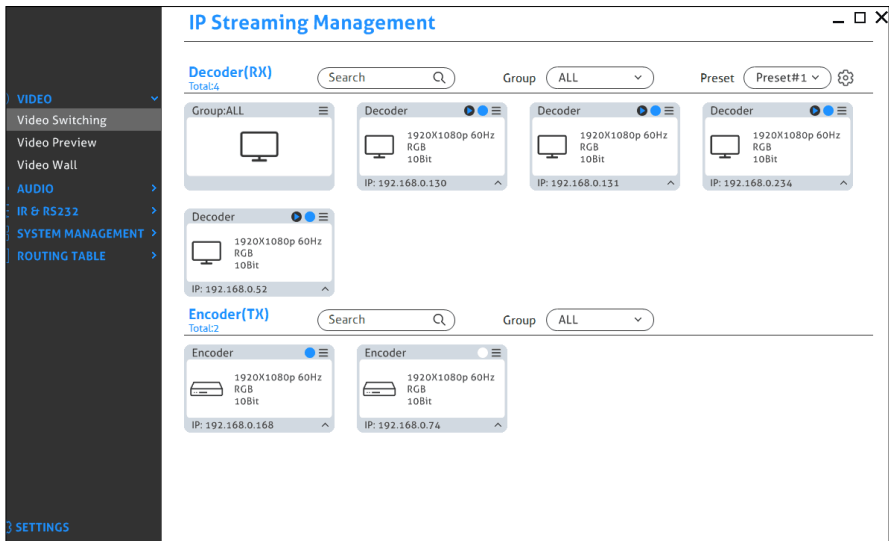

- **Preview Interval Seconds:** Set the refresh time of video preview.

Log Setting:

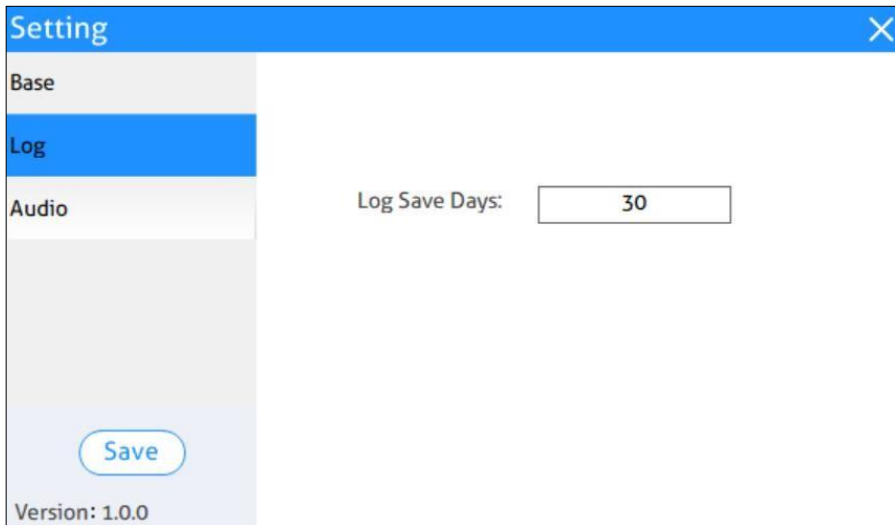

- **Log Save Days:** Set the number of days to save the software log.

Audio Setting:

Setting

Base

Log

Audio

Follow Video Switch: ☒

Audio Codec: AAC

PCM

AAC


Save

Version: 1.0.0

- **Follow Video Switch:** Enable the function of audio follow video switching. When switching video signal at Video Switching tab, the audio will automatically follow the video switch. Note that it is invalid that switch audio separately at Audio Switching tab.
- **Audio Codec:** Set the audio coding standard to AAC or PCM for all encoders.

5.3 Video Routing Tab

The "Video Switching" tab is used to manage signal routing between TX and RX devices.

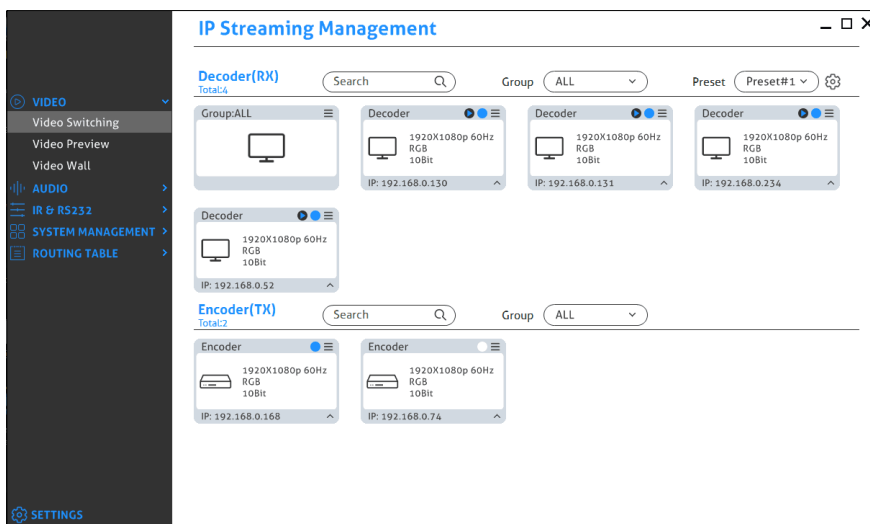

All RX devices are listed in the top half of the "Decoder (RX)" section. Similarly, all TX devices are listed in the bottom half, in the "Encoder (TX)" section.

5.3.1 Video Switching

Joining the RX to TX.

- In the Encoder (TX) section, using the left mouse button to select a TX by clicking on its associated active tile.
- Hold down the left mouse button and drag the TX tile over the RX tile it is to be joined with. Then release the mouse button to drop the TX tile onto the RX tile.
- TX and RX are now joined.

The video source connected to the Encoder (TX) now appears on the display connected to the respective Decoder (RX).

If the video is not being displayed, please verify the following:

- Ensure that the network switch has been properly configured.
- Confirm that the display can support the input source resolution.

- Verify that the HDMI cable being used is of good quality. This is particularly important for high-bandwidths of up to 1080p@60Hz resolution, requiring a "HDMI Premium High Speed" cable.

To assign a different input source to a Decoder (RX), repeat the steps mentioned above, dragging a different TX over an RX to associate the decoder itself to the new source device.

5.3.2 Video Recording

To record video by the below steps:

- 1) Plug a storage device (e.g. U-disk) to the "Storage (Type-A USB)" port of Decoder (RX).
- 2) Press the "Start/Stop" button on the front panel of Decoder (RX) or left-click the "Start/Stop" icon on the Decoder (RX) title as below.



- 3) After starting video recording, the "Recording" LED on the front panel of Decoder (RX) will illuminate blue.
- 4) Click the "Start/Stop" icon again to stop video recording, and the "Recording" LED will go out.
- 5) Wait at least 1 minute, and then remove the U-disk.

Note:

- The recorded video format is MP4, and the video details show that the sound has only one channel, but the audio output (PCM) of the device is two channels.
- The storage device format needs to support exFAT, FAT32 or NTFS.
- Click the menu icon of the respective RX tile, and then click "Video File Management" can enter the interface to manage video recording file.
- When the bit rate of TX is greater than 20Mbps and the bandwidth of the input source is relatively large (1080p@60Hz, about 148MHz), the recorded audio and video of RX are slightly out of sync, and the audio will be a bit delayed (less than 1s).


5.3.3 Sending Single Source to All RX Devices

To send the same source signal input to all receivers at the same time, simply drag and drop the TX unit that the desired source is connected to onto the blue tile in the Decoder (RX) section, labeled "Group: ALL".

Comment: To verify, which RX and TX are joined together, click on the Decoder (RX) or Encoder (TX) tile you want to see the connection status for. All the joined tiles will be highlighted in blue.

5.3.4 Disconnecting Source from RX

To disconnect a Decoder (RX) from an Encoder (TX) source, click the menu icon of the respective RX tile and select "Leave Video Channel".


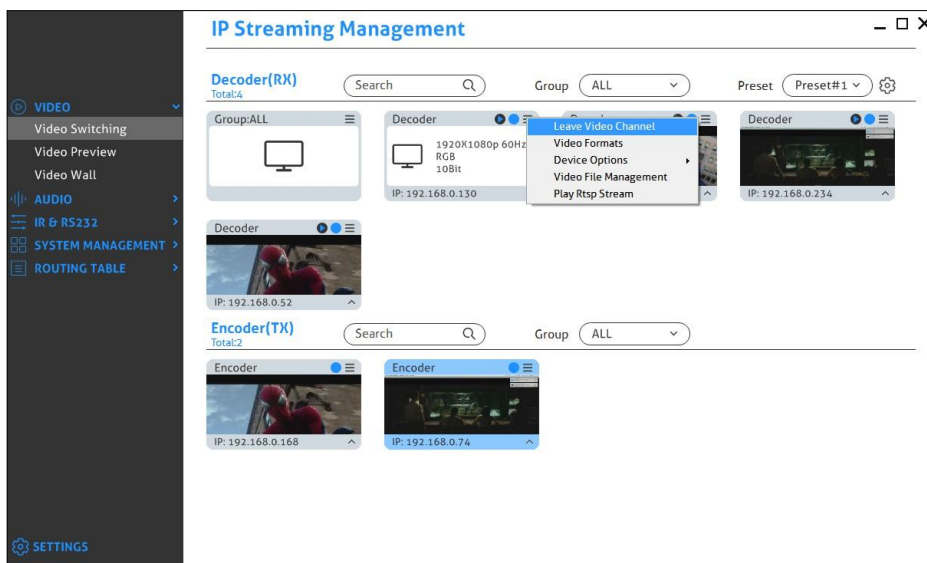


After disconnecting source from Decoder (RX), the display device will display “No Video” as shown in the below:




5.3.5 Preset Management

To rename a preset, delete a stored preset or save the current video switching setting, recall a saved preset by selecting “Preset #1~9” and click the gear icon to select the desired option: “Rename”, “Clear Preset”, “Save Preset”, “Recall Preset”.

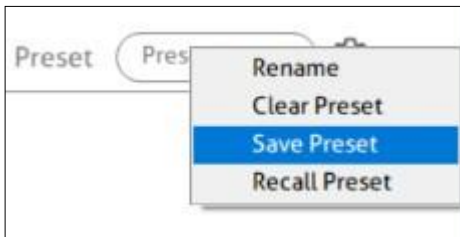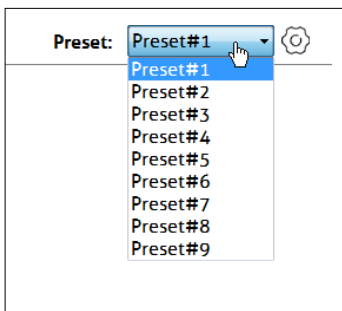

5.4 Video Preview Tab

The "Video Preview" tab is used to preview video signal of all TX and RX devices, and up to 16 screens to display video.

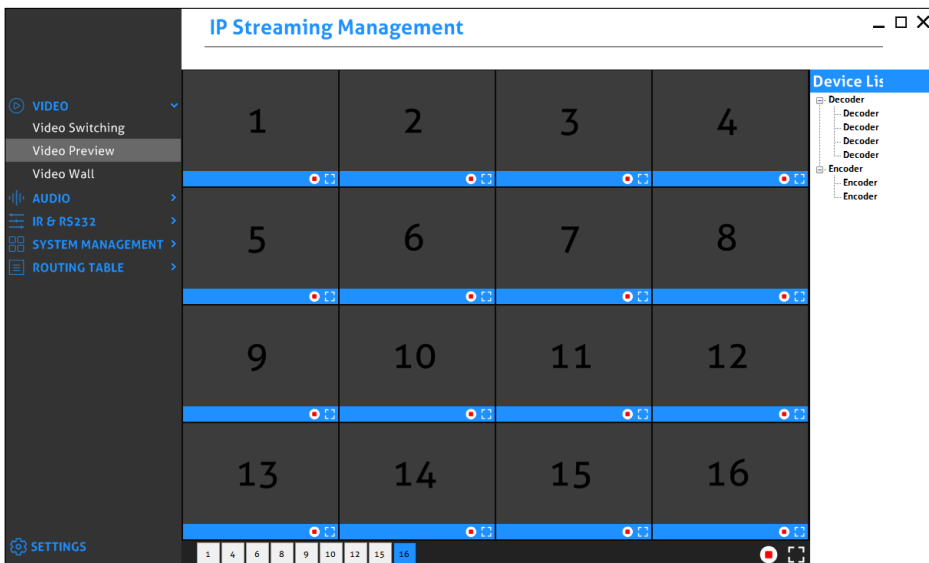

All encoders and decoders show on the device list on the right sidebar block.

Drag and drop the desired encoder/decoder unit over the screen block it is to be displayed.



Full screen.




Shrink screen.



Clear the current screen.

The product uses H.264 standard, so the application “VLC Media Player (Downloaded from website)” can be installed in the control PC for previewing video in higher definition.


- 1) After installing “VLC Media Player”, double click to open it and then click “Media” and select “Open Network Streaming”.

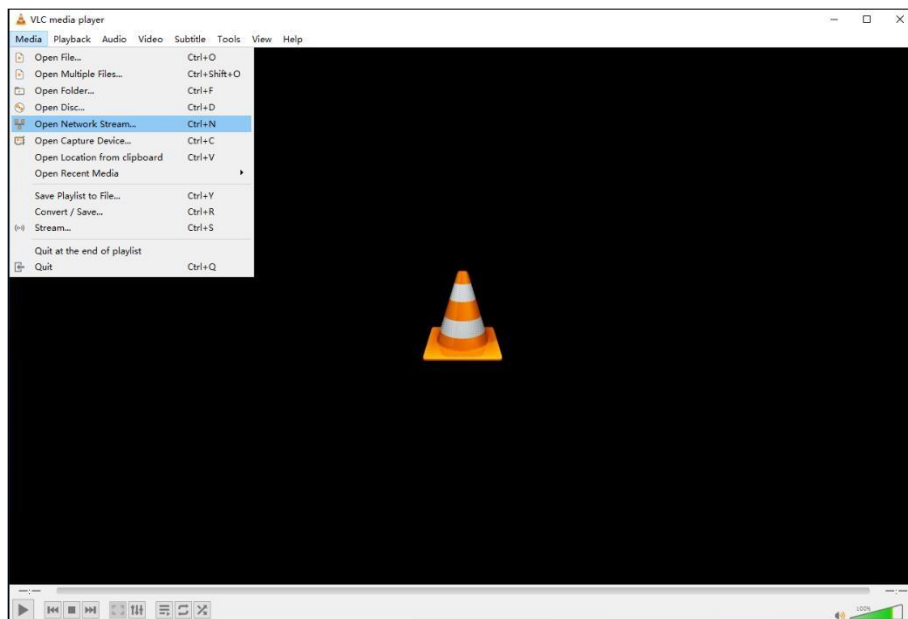


- 2) Click “Network” and enter a network URL of desired encode, and then click “Play”.

Network URL example: `rtsp://192.168.0.106:8554/live/stream=0`

The “192.168.0.106” of network URL can be modified according the IP address of A different encoder.

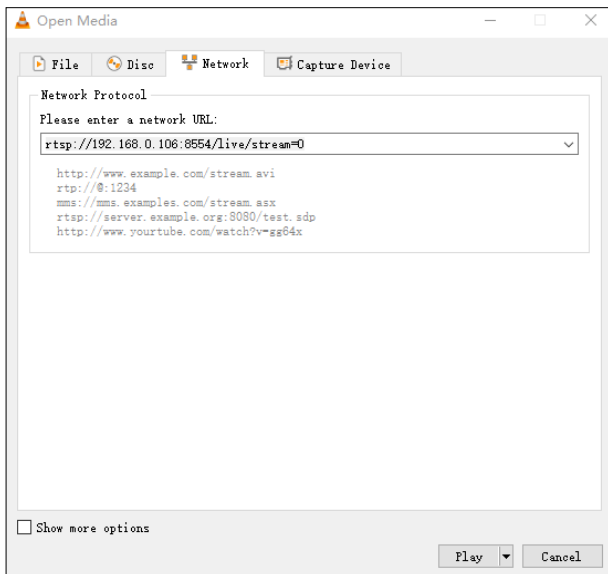

Note: When the VLC media player plays a video, if there is no sound, the audio

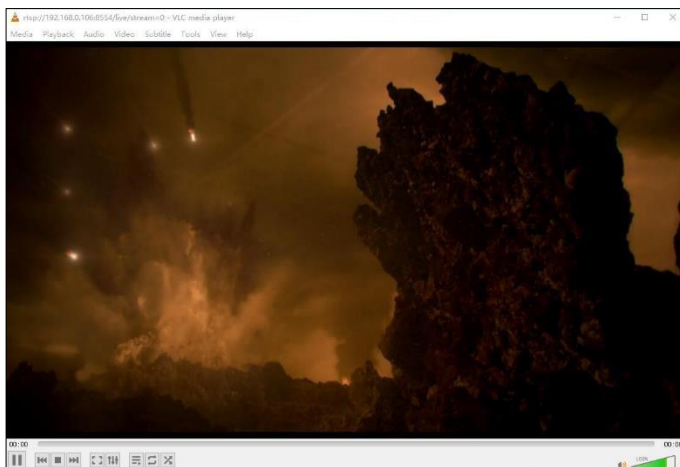


encoding standard of the encoder can be set to AAC at “Audio Setting” tab. Please refer to the **5.8.2.1. Device Setting**.

5.5 Video Wall Tab

The "Video Wall" tab allows single source signal (TX) to be assigned to multiple Receiver (RX) units and displayed across multiple screens, appearing as single video wall.

The values for "Bezel Horizon/Vertical" represent the absolute amount of pixels. The default value is set to 0 pixel.

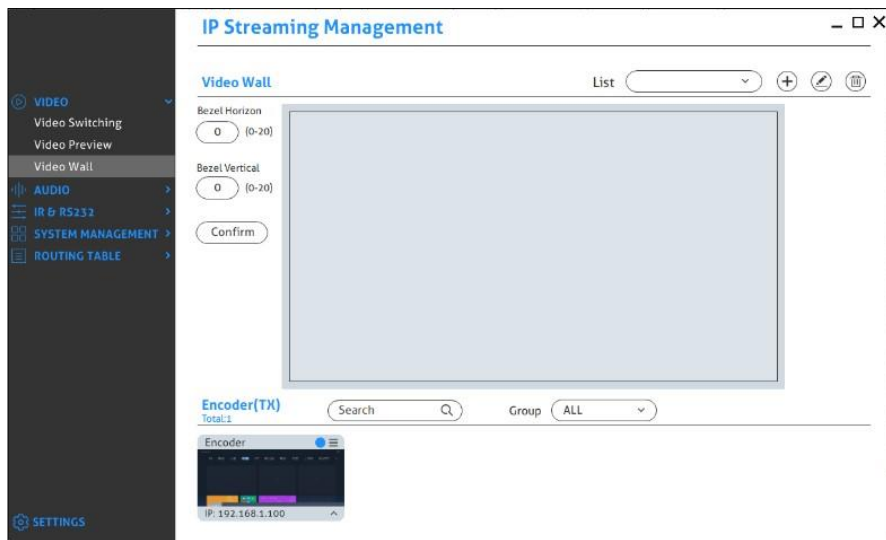

All TX devices are listed in the bottom, in the "Encoder (TX)" section.

5.5.1 Configure a Video Wall

- 1) Click “⊕” button and then set the name and the number of rows and columns for the video wall, the default setting is 2x2. (The max is 5x5)
- 2) Drag and drop Receiver (RX) units individually onto the video wall receiver tile and click “Apply” button.
- 3) Next, drag the desired Transmitter (TX) source tile and drop it onto the tile labeled
- 4) The source will now be visible across the whole Video Wall according to your configuration.
- 5) Adjust the bezel correction values (Horizon-Vertical), to fit the bezel thickness of the connected displays.

Video Wall

Video Wall Name:

◀ 1 column 2 column 3 column ▶

⛔

▲

1 row

2 row

3 row

▼

1x1 video wall creation is not allowed.

Decoder (Rx)

Drag Decoder to each display frame.

1

2

Apply

Cancel

Comment: To apply new bezel values, it may be necessary to allocate the Transmitter (TX) again to the video wall.


Tel: (800) 521-8467

Email: sales@thorfiber.com

<http://www.thorbroadcast.com>


5.5.2 Modify a Video Wall

Select one video wall and click the following icon to modify the setting.

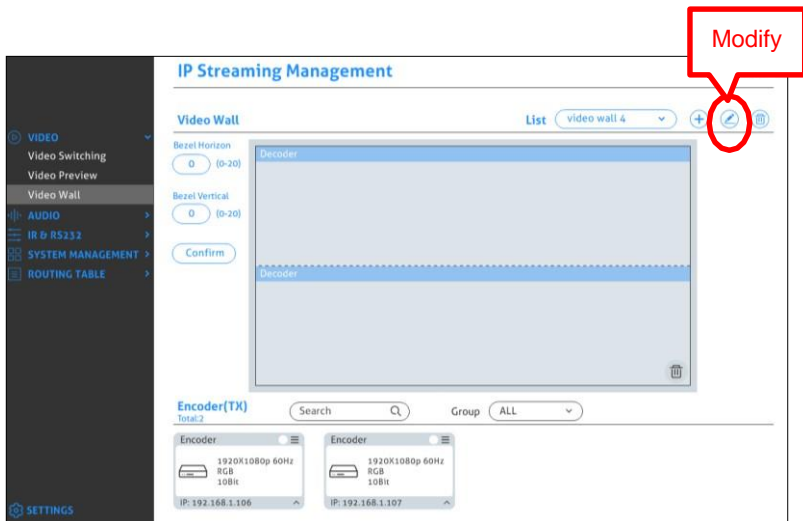



Drag and drop Receiver (RX) units onto the video wall receiver tile.

Clear Icon is to clear chosen Receivers (RX), and video wall size doesn't been changed..

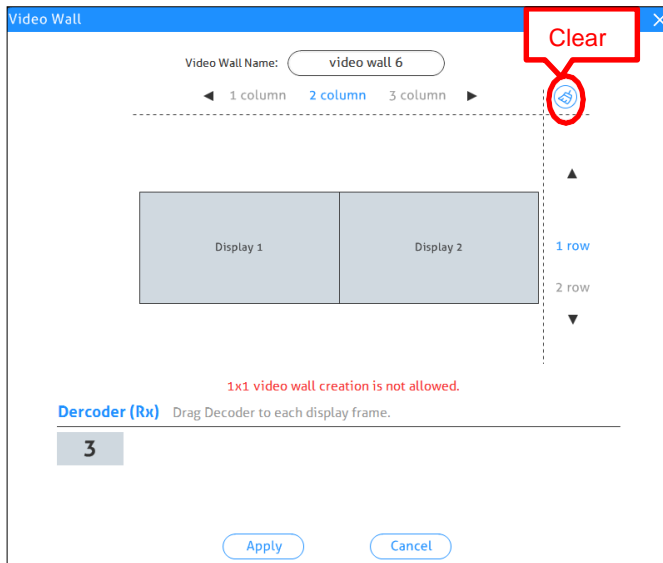


5.5.3 Delete a Video Wall

To delete a preset, select one video wall and click the delete icon to delete it.

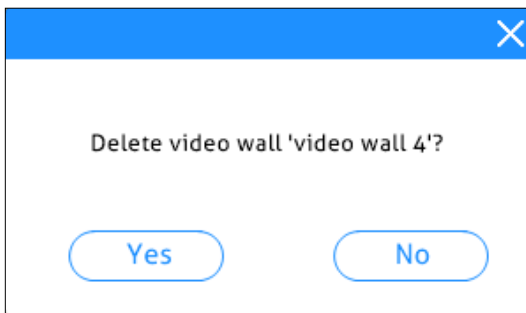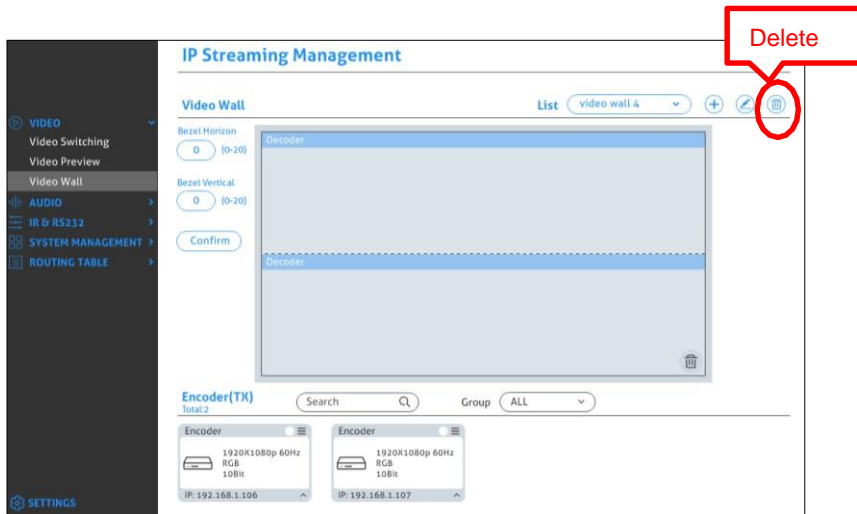

5.6 Audio Routing Tab

The "Audio Switching" tab is used to setup and manage audio routing between TX and RX devices.

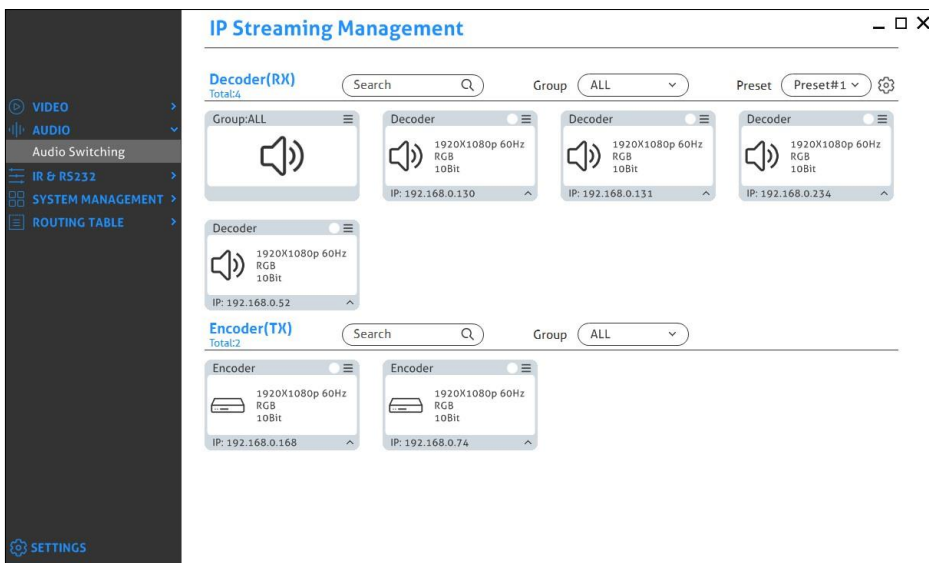

IP Streaming Management

Decoder(RX)
Total:4

Search [] Group: ALL Preset: Preset#1

Group: ALL

Decoder

1920X1080p 60Hz
RGB
10Bit
IP: 192.168.0.130

Decoder

1920X1080p 60Hz
RGB
10Bit
IP: 192.168.0.131

Decoder

1920X1080p 60Hz
RGB
10Bit
IP: 192.168.0.234

Decoder

1920X1080p 60Hz
RGB
10Bit
IP: 192.168.0.52

Encoder(TX)
Total:2

Search [] Group: ALL

Encoder

1920X1080p 60Hz
RGB
10Bit
IP: 192.168.0.168

Encoder

1920X1080p 60Hz
RGB
10Bit
IP: 192.168.0.74

All the RX devices are listed in the top half of the Decoder (RX) section. Similarly, all the TX devices are listed in the bottom half in the Encoder (TX) section.

First, verify if appropriate TX and RX devices are joined:


- 1) Verify that the Decoder (RX) is currently joined with the desired Encoder (TX).
 - a) Click on the RX and the Encoder (TX), it will be highlighted in blue when joined to.
 - b) Selecting the respective encoder will highlight all the decoders joined to the same TX.
- 2) If the respective Encoder (TX) is currently not joined to the Decoder (RX), join them together:
 - a) In the Encoder (TX) section, select a TX by clicking on its associated active tile.
 - b) Drag and drop the TX tile onto the RX tile to which it is attached.
 - c) TX and RX are now joined together.
 - d) Repeat above steps if additional decoders are to be joined to the same TX.

5.7 RS232 Routing Tab

The "RS232 Routing" tab is used to setup and manage RS232 data distribution for devices.

There are two sections provided in the IP Streaming Management interface, "Encoders (TX)" and "Decoders (RX)". Each device discovered on the network is listed in both groups, because each of them can send and receive RS232 data.

- 1) Select the "RS232 Routing" tab in the IP Streaming Management interface.
- 2) Verify which Encoders and Decoders are joined together. Click on the device tile whose connection status you want to see. All joined together tiles will be highlighted blue.
- 3) To pair devices, drag the tile representing the Encoder (TX) and drop it over the desired Decoder (RX) to create one-way communication.
- 4) To create a bi-directional RS232 path on a pair of Encoder (TX) and Decoder (RX), two separate pairings are required. Repeat the step above, but in reverse (drop TX on RX) to create the second pairing.

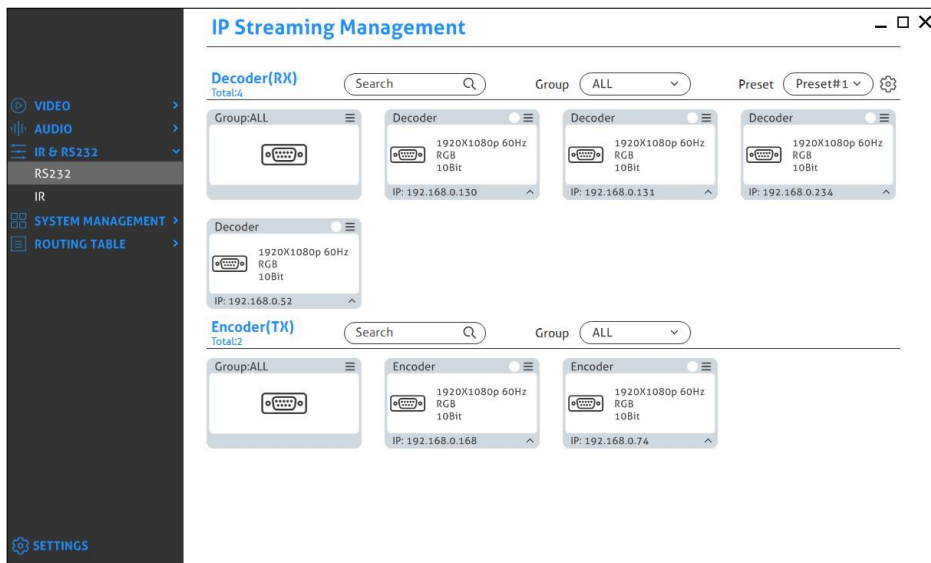

The screenshot displays the "IP Streaming Management" interface with the "RS232" tab selected in the left sidebar. The interface is divided into two main sections: "Decoder(RX)" and "Encoder(TX)".

Decoder(RX) Section:

- Search bar and "Group: ALL" dropdown.
- Four decoder tiles are shown, each with a search icon, a list icon, and a refresh icon. The tiles are:
 - Tile 1: 1920X1080p 60Hz RGB 10Bit, IP: 192.168.0.130
 - Tile 2: 1920X1080p 60Hz RGB 10Bit, IP: 192.168.0.131
 - Tile 3: 1920X1080p 60Hz RGB 10Bit, IP: 192.168.0.234
 - Tile 4: 1920X1080p 60Hz RGB 10Bit, IP: 192.168.0.52

Encoder(TX) Section:

- Search bar and "Group: ALL" dropdown.
- Two encoder tiles are shown, each with a search icon, a list icon, and a refresh icon. The tiles are:
 - Tile 1: 1920X1080p 60Hz RGB 10Bit, IP: 192.168.0.168
 - Tile 2: 1920X1080p 60Hz RGB 10Bit, IP: 192.168.0.74

5.7.1 Assign Encoder to all Decoders

To distribute RS232 data from a single encoder to all decoders, drag and drop the respective encoder's tile onto the tile labeled "Group: ALL" in the "Decoders" section of the "RS232 Routing" tab.

5.7.2 Sending RS232 Data from IP Streaming Management to a Third-party Device

- 1) Click menu icon of the respective encoder or decoder tile.
- 2) Select "Device Options".
- 3) Select "Send/Receive RS232".
- 4) A dialog box opens.
- 5) Enter the RS232 string you want to send.
- 6) Click the "Send" button to send out the string.
- 7) Paired devices will receive the RS232 command.

Send&Receive IR: Blu-ray (192.168.0.108)

Num	Data	Remark

Clear Send Edit

☐ Time Stamp


5.8 IR Routing Tab

The "IR Routing" tab is used to setup and manage IR data distribution for devices.

There are two sections provided in the IP Streaming Management interface, "Encoders (TX)" and "Decoders (RX)". Each device discovered on the network is listed in both

groups, because each can both send and receive IR data.

- 1) Select the "IR Routing" tab in the IP Streaming Management interface.
- 2) Verify, which Encoders and Decoders are joined together. Click on the device tile you want to see the connection status of. All joined together tiles will be highlighted blue.
- 3) To pair devices, drag the tile representing the Encoder (TX) and drop it over the desired Decoder (RX) to create one-way communication.
- 4) To create a bi-directional IR path on a pair of Encoder (TX) and Decoder (RX), two separate pairings are required. Repeat the step above, but in reverse (drop TX on RX) to create the second pairing.

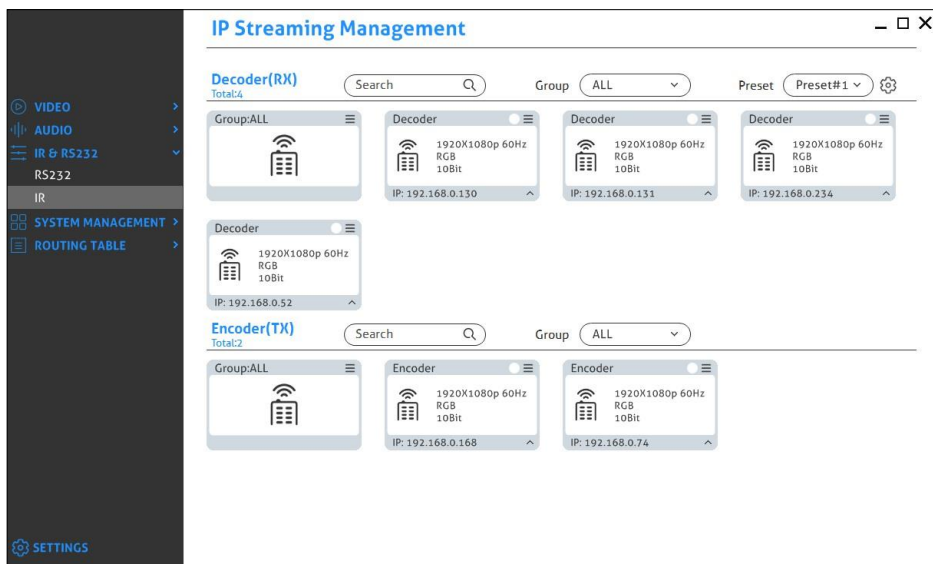

5.8.1 Assign Encoder to all Decoders

To distribute IR data from a single encoder to all decoders, drag and drop the respective encoder's tile onto the tile labeled "Group ALL" in the "Decoders" section of the "IR Routing" tab.

5.8.2 Sending IR Data from IP Streaming Management to a Third-party Device

- 1) Click menu icon of the respective encoder or decoder tile.
- 2) Select "Device Options".

- 3) Select "Send/Receive IR".
- 4) A dialog box opens.
- 5) Enter the IR string you want to send.
- 6) Click the "Send" button to send out the string.
- 7) Paired devices will receive the IR command.

Send&Receive IR:Decoder(192.168.0.210)

Num.	Data	Remark
1	0000 006d 0022 0002 0069	cphl -
2	0000 006d 0022 0002 006a	cphl +
3	0000 006d 0022 0002 006b	mute

Clear

+

-

Alter

Send

☐ Time Stamp

Infrared Limitations

A Sender can either send IR data to a specific device (unicast) or broadcast to all devices active on the network (broadcast). Should be noted however, that a sender cannot send data simultaneously to a range of devices using multi-unicast

The data format used when sending IR data from control layer to a device is 'Pronto'. The link below points to a good description of Pronto format definition with examples.

<http://www.remotecentral.com/features/irdisp1.htm>

The pronto format is a series of hex numbers that describe everything that is needed to generate the required waveform. It includes the carrier frequency, the ON/OFF period along with data and error checksum.

Large libraries of Pronto IR codes are publicly available and easy to find on the Web. The code below is a Pronto string to turn Sony BlueRay player ON and OFF

```
0000 0067 0000 0015 0060 0018 0030 0018 0018 0018 0030 0018 0018 0018 0030
0018 0018 0018 0018 0018 0018 0018 0030 0018 0018 0018 0030 0018 0030 0018
```


0018 0018 0030 0018 0018 0018 0018 0018 0018 0018 0030 0018 0030 0018 0030
01FE.


5.9 Global Command Options and Settings

To access a device's options, click the menu icon of any connected TX or RX.

Note: Device options can be accessed from any detected device and from any of the interface tabs, "Video Switching", "Audio Switching", etc.

5.9.1 Decoder (RX) Settings Options


The following section illustrates the Decoder (RX) device settings dialog box.

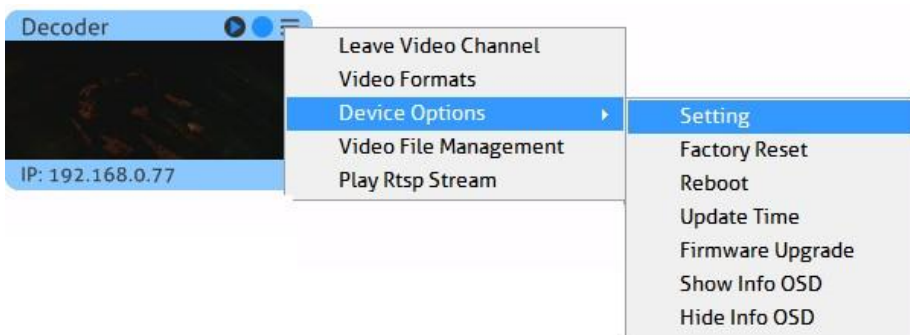

- **Leave Video Channel:** Disconnect the Decoder (RX) from an Encoder (TX) source.
- **Video Formats:** Set the video format of the decoder.
- **Device Setting:** Analog Audio Setting, Network Setting and External Storage Setting.
- **Factory Reset:** Restore the decoder to factory settings.
- **Reboot:** Reboot the decoder.
- **Update Time:** Update the device time to let it same with the control PC.
- **Firmware Upgrade:** Update firmware version of decoder.
- **Show Info OSD:** Show the device information of decoder on display.
- **Hide Info OSD:** Hide the device information of decoder on display.
- **Video File Management:** Manage and download the video recording files.

5.9.1.1. Video Format Setting

To set the video format of decoder, click the menu icon of the respective RX tile and select "Video Formats".

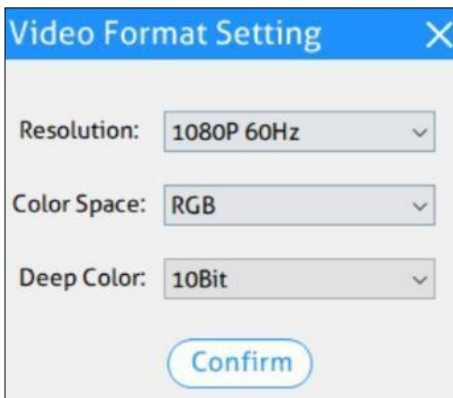

The dialog box titled "Video Format Setting" contains three dropdown menus and a "Confirm" button. The first dropdown menu is labeled "Resolution:" and is set to "1080P 60Hz". The second dropdown menu is labeled "Color Space:" and is set to "RGB". The third dropdown menu is labeled "Deep Color:" and is set to "10Bit".

The following resolution, color space, Deep Color can be selected:

Video Resolution	1080p@25Hz, 1080p@30Hz, 1080p@50Hz, 1080p@60Hz (Default), 720p@50Hz, 720p@60Hz, 1080I@50Hz, 1080I@60Hz
Color Space	RGB, YCbCr 4:4:4
Deep Color	10Bit, 12Bit

5.9.1.2. Device Setting

Click the menu icon of the respective RX tile and click "Device Options", then select "Setting" to enter the below device setting interface.

Analog Audio Setting:

Select "Enable/Disable" to turn on/off the analog audio output of decoder.

Device Setting:Decoder(192.168.0.22) X

Coding Setting

Network Setting

Record Setting

Save

Analog Audio Output: Enable ▾

Luminance: 85 ▴ ▾ (0-100)

Contrast: 47 ▴ ▾ (0-100)

Hue: 50 ▴ ▾ (0-100)

Saturation: 65 ▴ ▾ (0-100)

Network Setting:

Use this tab to modify the device's host name and configure the IP address.

Device Setting:Decoder(192.168.0.22) X

Coding Setting

Network Setting

Record Setting

IP Mode :

DHCP ▼

Device Name :

Decoder

IP Address :

192.168.0.22

Subnet Mask :

255.255.255.0

Default Gateway :

192.168.0.1

Save

To rename a device, enter a name (e. g. "H-HDMI-D-1") into the "Host Name" edit box. Press the "Save" button to save the new host name. The host name is persistent and kept until the device is forced back to factory defaults.

The IP address can be set to be either "DHCP" or "Manual".

- Select "DHCP" to receive the IP address from a DHCP server or to be auto-assigned with an IP from the 169.254.X.X range, in case there is no DHCP server on the network.
- Select "Manual" to set a static IP address (IPV4 address, subnet mask and gateway address).

Press "Save" to save the new IP address. The new IP mode settings are stored in non-volatile memory and kept, until the device is forced back to factory defaults.

Note: *Special attention is required, when assigning a manual IP address. The address has to be both unique and reachable. Any mistake when entering the IP address, subnet mask or gateway address can render the device unreachable.*

External Storage Setting:

Use this tab to set the video recording type to "Stop recording when storage is full" or "Overwritten recording when storage is full".

Click "Formatting" to format the video storage device.

Device Setting:Decoder(192.168.0.22)

Coding Setting
Network Setting
Record Setting

Record Type: Stop Recording
Record Quality: 5 Mbps(1-10)
Format Storage: Formatting

Save

5.9.1.3. Factory Reset

Click the menu icon of the respective RX tile and click "Device Options", then click "Factory Reset" to open prompt box. Click "Yes" to restore factory default.


5.9.1.4. Device Reboot

Click the menu icon of the respective RX tile and click "Device Options", then click "Reboot" to open prompt box. Click "Yes" to reboot the device.

5.9.1.5. Upgrade


Click the menu icon of the respective RX tile and click "Device Options", then click "Firmware Upgrade" to enter the below interface.

Select upgrade type and click "Browse" to add the update file, and then click "Submit" to start the firmware upgrade.

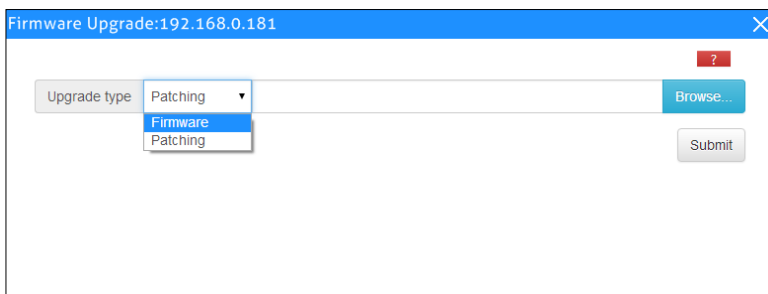

5.9.1.6. Video File Management

Click the menu icon of the respective RX tile, and then click "Video File Management" to enter the below interface to manage video recording files.

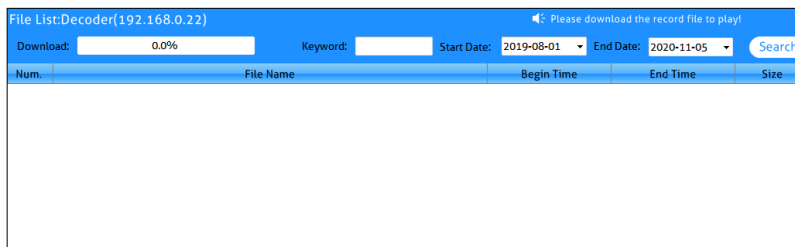

5.9.2 Encoder (TX) Settings Options

The following section illustrates the Encoder (TX) device's settings dialog box.



- **Leave Multicast Mode:** Exit multicast mode.
- **Device Setting:** Network Setting and Audio Setting.

- **Factory Reset:** Restore factory default.
- **Reboot:** Reboot the encoder.
- **Update Time:** Update the device time to let it same with the control PC.
- **Firmware Upgrade:** Update firmware version of encoder.
- **Show Info OSD:** Show the device information of encoder on display.
- **Hide Info OSD:** Hide the device information of encoder on display.
- **Video Formats:** Set the video format of the encoder.

5.9.2.1. Device Setting

Click the menu icon of the respective TX tile and click "Device Options", then select "Setting" to enter the below setting interface.

Audio Setting:

Use this tab to set the audio coding standard of the encoder to AAC or PCM.

Device Setting:Encoder(192.168.0.167)

Coding Setting

Network Setting

Video Quality:

15

Mbps(1-30)

Audio Codec:

AAC

Luminance:

85

(0-100)

Contrast:

47

(0-100)

Hue:

50

(0-100)

Saturation:

65

(0-100)

Save

Network Setting:

Use this tab to modify the device's host name and configure the IP address.

Device Setting:Encoder(192.168.0.167)

Coding Setting

Network Setting

IP Mode: DHCP

Device Name: Encoder

IP Address: 192.168.0.167

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.0.1

Save

To rename a device, enter a name (e. g. "H-HDMI-E-1") into the "Host Name" edit box. Press the "Save" button to save the new host name. The host name is persistent and kept until the device is forced back to factory defaults.

The IP address can be set to be either "DHCP" or "Manual".

- Select "DHCP" to receive the IP address from a DHCP server or to be auto-assigned with an IP from the 192.168.X.X range, in case there is no DHCP server on the network.
- Select "STATIC" to set a static IP address (IPv4 address, subnet mask and gateway address).

Press "Save" to save the new IP address. The new IP mode settings are stored in non-volatile memory and kept, until the device is forced back to factory defaults.

Note: Special attention is required, when assigning a manual IP address. The address has to be both unique and reachable. Any mistake when entering the IP address, subnet mask or gateway address can render the device unreachable.

5.9.2.2. Video Format Setting

To set the video format of encoder, click the menu icon of the respective TX tile and select "Video Formats".

Video Format Setting

Resolution: 1080P 60Hz

Color Space: RGB

Deep Color: 10Bit

Confirm

The following resolution, color space, Deep Color can be selected:

Video Resolution	1080p@25Hz, 1080p@30Hz, 1080p@50Hz, 1080p@60Hz (Default), 720p@50Hz, 720p@60Hz, 1080I@50Hz, 1080I@60Hz
Color Space	RGB, YCbCr 4:4:4
Deep Color	10Bit, 12Bit

5.9.2.3. Factory Reset

Click the menu icon of the respective TX tile and click "Device Options", then click "Factory Reset" to open prompt box. Click "Yes" to restore factory default.


5.9.2.4. Device Reboot

Click the menu icon of the respective TX tile and click "Device Options", then click "Reboot" to open prompt box. Click "Yes" to reboot the device.

5.9.2.5. Upgrade

Click the menu icon of the respective TX tile and click "Device Options", then click "Firmware/Patching Upgrade" to enter the below interface.

Select upgrade type and click "Browse" to add the update file, and then click "Submit" to start the firmware/patching upgrade.

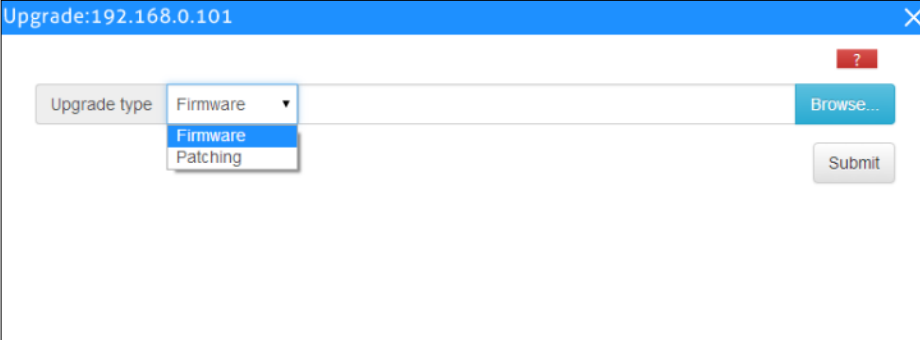

Upgrade:192.168.0.101

Upgrade type: Firmware

Buttons: Browse..., Submit

5.10 System Management Tab

5.10.1 Security Settings

Select the “Security” tab in the IP Streaming Management interface to enter the section for modifying the password.

VIDEO

AUDIO

IR & RS232

SYSTEM MANAGEMENT

ROUTING TABLE

SETTINGS

IP Streaming Management

Security

Num.	User Name	Grade	User Rights
1	admin	Administrator	All operation permissions

New


Change

Delete

- Click “New” to add new user account and set its access permission.
- Select one account on the list, and then click “Change” to reset password.
- Select one account on the list, and then click “Delete” to delete the selected user.

5.10.2 System Logs

Select the “System Logs” tab in the IP Streaming Management interface to enter the section for inquiring the system logs.

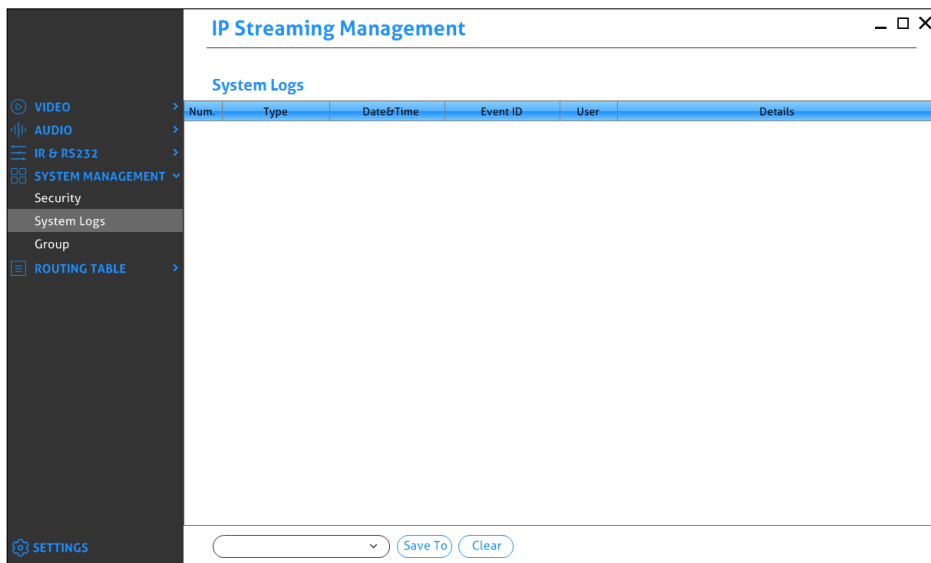


The screenshot shows the IP Streaming Management interface. On the left is a dark sidebar with navigation options: VIDEO, AUDIO, IR RS232, SYSTEM MANAGEMENT (expanded), Security, System Logs (selected), Group, and ROUTING TABLE. At the bottom of the sidebar is a SETTINGS icon. The main area is titled 'IP Streaming Management' and 'System Logs'. It contains a table with the following columns: Num., Type, Date&Time, Event ID, User, and Details. The table is currently empty. At the bottom of the main area, there is a search bar with a dropdown arrow, and two buttons labeled 'Save To' and 'Clear'.


- Select system log file, and then click “Save To” to save the log file, or click “Clear” to delete the selected log file.

5.10.3 Group Management

Select the “Group” tab in the IP Streaming Management interface to enter the section for group setting.

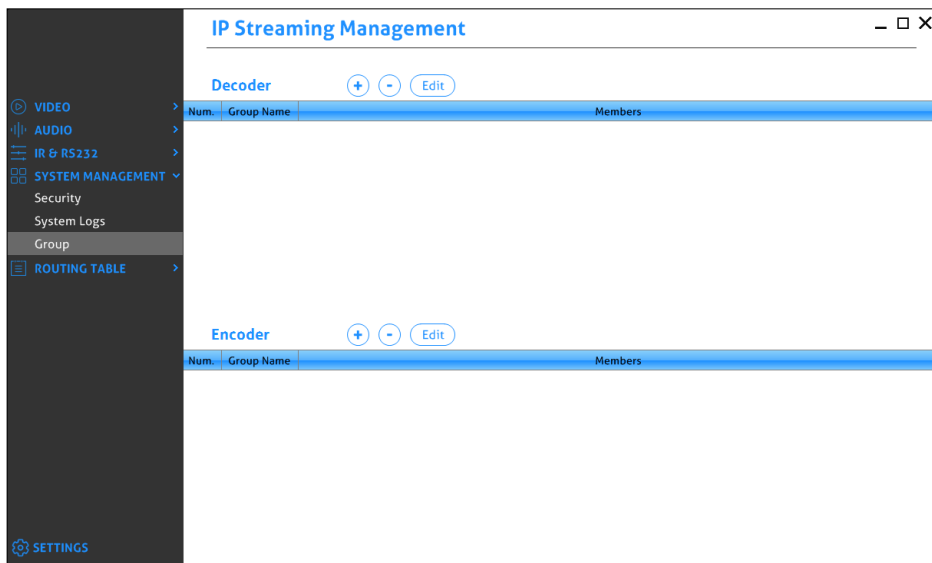

- Click “+” to add new group.
- Select one group on the list, and then click “-” to delete the group.
- Select one group on the list, and then click “Edit” to set the group.

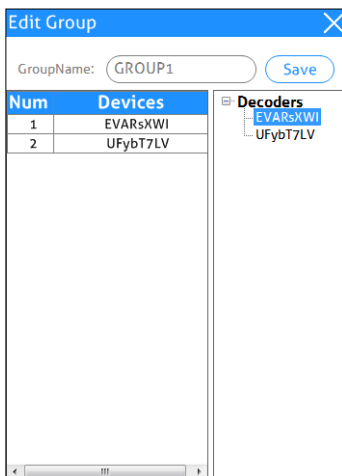

5.11 Routing Table

The routing table allows to gather info about the video, HDMI audio, analog audio and RS232 routing status.

Video Routing Table:

VIDEO

AUDIO

IR & RS232

SYSTEM MANAGEMENT

ROUTING TABLE

SETTINGS

IP Streaming Management

Video Routing Table

Host Name

Num.	Encoder(TX)	Decoder(RX)
1	Encoder	Decoder;Decoder;Decoder
2	Encoder	Decoder

Audio Routing Table:

VIDEO

AUDIO

IR & RS232

SYSTEM MANAGEMENT

ROUTING TABLE

SETTINGS

IP Streaming Management

Audio Routing Table

Host Name

Num.	Encoder(TX)	Decoder(RX)
1	Encoder	Null
2	Encoder	Null

RS232 Routing Table:

VIDEO

AUDIO

IR & RS232

SYSTEM MANAGEMENT

ROUTING TABLE

Video

Audio

RS232

IR

SETTINGS

IP Streaming Management

RS232 Routing Table

Host Name TX->RX

Num.	Encoder(TX)	Decoder(RX)
1	Encoder	Null
2	Encoder	Null

IR Routing Table:

VIDEO

AUDIO

IR & RS232

SYSTEM MANAGEMENT

ROUTING TABLE

Video

Audio

RS232

IR

SETTINGS

IP Streaming Management

IR Routing Table

Host Name TX->RX

Num.	Encoder(TX)	Decoder(RX)
1	Encoder	Null
2	Encoder	Null

Chapter 6 Packing List

H-HDMI-E	1PC
H-HDMI-D	1PC
User Manual	1PC

For Further Tech Support
1-800-521-Thor(8467) ext 2
support@thorfiber.com