

# H-2ADHD-QAM-IPLL



## Quick Setup Guide

### Step 1: Connect and Login

Connect Power Supply



Lock lights indicate inputs are properly connected

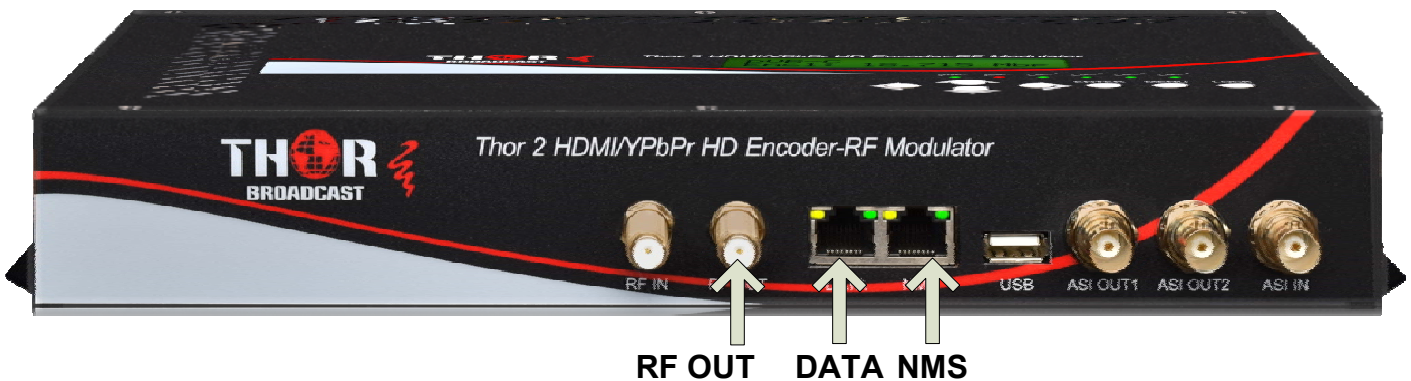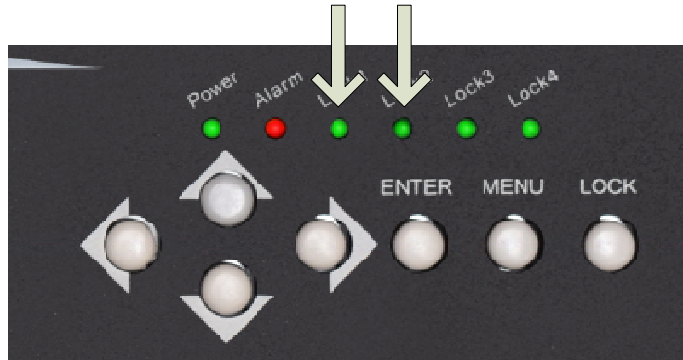


- Connect the NMS port to your PC using an ethernet cable
- Open web browser and go to <http://192.168.2.136>
- Login/Password: admin/admin

Scan for more info:



## Step 2: Input Parameters



Select "Input" from the main menu



Select Channel

### Recommended Settings:


Video Format: Mpeg2  
Video BitRate(Kbps): 18000  
Audio Format: AC3



Select Interface Option

Get Apply

Click "Apply"

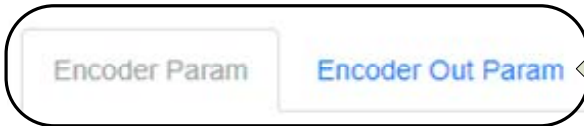

Select "Encoder Out Param"




Check Boxes to choose desired outputs

Get Apply

Click "Apply"

Repeat these steps as necessary for CHANNEL 2

## Step 3: Modulator Settings



Select "Modulator" from the main menu

Set RF Frequency (See Chart)



Standard	J.83B	
Constellation	64 QAM	
Symbol Rate (Ksbs)	5057	
RF1 Frequency (MHz)	57	<input checked="" type="checkbox"/> RF ON
RF2 Frequency (MHz)	63	<input checked="" type="checkbox"/> RF ON
RF3 Frequency (MHz)	69	<input checked="" type="checkbox"/> RF ON
RF4 Frequency (MHz)	79	<input checked="" type="checkbox"/> RF ON
RF Level (-30 ~ -10 dBm)	-16	

Check Boxes to Enable desired RF outputs



## Step 4: IP Streaming




Select "Output" from the main menu

#	Mode	Null Pkt Filter	Output IP	Dst port	Src port	TTL	
1	UDP	ON	224.2.2.2	3001	5001	128	Apply
2	UDP	ON	224.2.2.2	3002	5002	128	Apply

**IMPORTANT:**  
TO ACCESS STREAMS, CONNECT  
DEVICES TO THE DATA PORT USING  
AN ETHERNET CABLE

Connect to the stream using the  
appropriate IP and Port Number  
Example:  
udp://@224.2.2.2:3001

## Step 5: Save Configuration

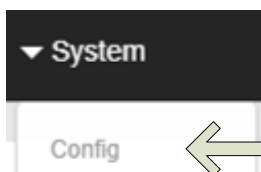

Select "System" then  
"Config" from the  
main menu

**IMPORTANT:**  
YOU MUST SAVE CONFIGURATION  
OR CHANGES WILL BE LOST AFTER  
RESTARTING THE UNIT

### Save Configuration

When you change the parameter, you should save configuration, otherwise the new configuration will be lost after a reboot.

Set

Press "Set"



Press "OK"

## CATV QAM Channel Center Frequency - 54 MHz to 860 MHz (J.83B)

QAM 256 / Symbol Rate 5.361Mpsps , QAM 64 / Symbol Rate 5.057Mpsps

EIA CH.	MHz Center Frequency	EIA CH.	MHz Center Frequency	EIA CH.	MHz Center Frequency
2	57	42	333	87	603
3	63	43	339	88	609
4	69	44	345	89	615
5	79	45	351	90	621
6	85	46	357	91	627
95	93	47	363	92	633
96	99	48	369	93	639
97	105	49	375	94	645
98	111	50	381	100	651
99	117	51	387	101	657
14	123	52	393	102	663
15	129	53	399	103	669
16	135	54	405	104	675
17	141	55	411	105	681
18	147	56	417	106	687
19	153	57	423	107	693
20	159	58	429	108	699
21	165	59	435	109	705
22	171	60	441	110	711
7	177	61	447	111	717
8	183	62	453	112	723
9	189	63	459	113	729
10	195	64	465	114	735
11	201	65	471	115	741
12	207	66	477	116	747
13	213	67	483	117	753
23	219	68	489	118	759
24	225	69	495	119	765
25	231	70	501	120	771
26	237	71	507	121	777
27	243	72	513	122	783
28	249	73	519	123	789
29	255	74	525	124	795
30	261	75	531	125	801
31	267	76	537	126	807
32	273	77	543	127	813
33	279	78	549	128	819
34	285	79	555	129	825
35	291	80	561	130	831
36	297	81	567	131	837
37	303	82	573	132	843
38	309	83	579	133	849
39	315	84	585	134	855
40	321	85	591	135	861
41	327	86	597		